

11417

09-14 DODGE
CHALLENGER



11417

09-14 DODGE
CHALLENGER

09-14 DODGE CHALLENGER

Hood Scoop Trim

TOOLS REQUIRED:

8mm Socket & Ratchet
Drill bit and drill motor

PARTS LIST

(4) Washers
(4) 6/32 Nylon Lock Nuts
(2) Hood Scoop Trims

Step 1

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION. Remove the factory hood scoop inserts. This is done by opening the hood and depressing the plastic latches that hold the hood scoop inserts in the hood.

Step 2

Next step is to take one of the hood scoop trims and insert it into the factory hood scoop insert and see where the threaded studs on the trim will contact the factory hood scoop insert. Drill a hole for each of the 2 studs (approx 1/2" hole). (Fig 1)

Step 3

Next step is to put a washer and 6/32 nylon lock nut on each of the threaded studs and tighten. (Fig 2)

Step 4

When you have installed both hood scoop trims you can now reinstall all the plastic hood scoop inserts back into the hood scoop openings. (Fig 3)

ne by
he plastic factory

into the factory
will contact
tuds to fit through

the threaded

all the plastic



Fig 1

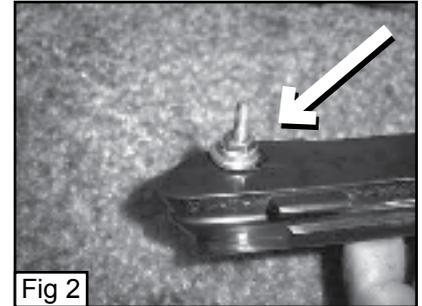


Fig 2



Fig 3