

55029

52029

2010-2013 CHEVY CAMARO SS



55029

52029

2010-2013 CHEVY CAMARO SS

2010-2013 CHEVY CAMARO SS

Mesh Bumper

TOOLS REQUIRED:

Socket & Ratchet Set
Screwdriver Set
1/16 Drillbit & Drill

PARTS LIST






(1) Mesh Grille
(16) #8 Screws
(16) #8 Flatnuts

Step 1 Removal

Remove 3 Torx from front of each Fenderwell. (Fig. 1)
Remove 7mm Bolt from Bumper Cover just behind side signals. (Fig. 2)
Remove 4 10mm Bolts from under Fender Well Cover at top front of Bumper Cover. (Fig. 3)
Remove 2 10mm Bolts from bottom of Bumper Cover. (Fig. 4)
Unplug Fog Lights
Remove Bumper Cover
Remove Plastic Bumper Reinforcement.

Step 2 Grille Installation

Unlatch from around the Factory Bumper Grille and Remove. (Fig. 5)
Place Mesh Bumper into the Factory Bumper Opening. (Fig. 6)
With a 1/16 Drillbit, Drill through the Holes that are on the Brackets on the Mesh Grille. (Fig. 7)
Insert the #8 Screw through the Hole you Drilled and Place a Flatnut to Thread the Screw in Place. (Fig. 8)
Place back the Factory Shell.

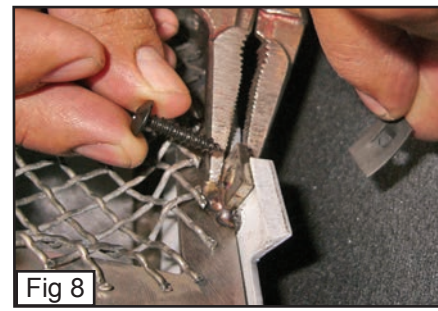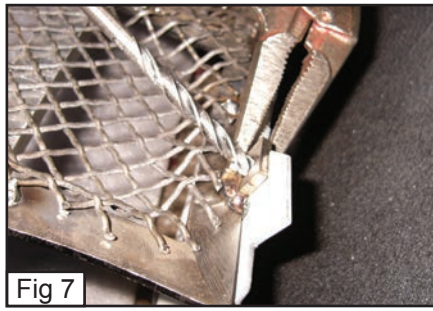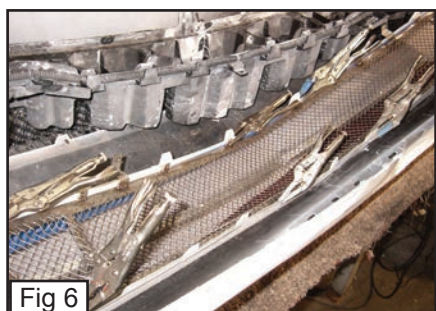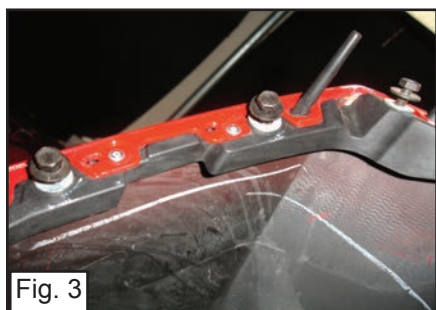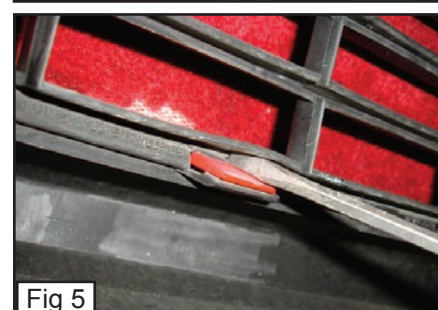

INSTALLATION COMPLETE