

55197
08-12 CADILLAC
CTS



55197
08-12 CADILLAC
CTS

08-12 Cadillac CTS
MESH BUMPER GRILLE


Tools Required:

Phillips & Slotted Screw Drivers
8mm Socket

Parts List:


1 Bumper Grille
6 10-32 Nylon Lock Nuts
6 3/4" 10-32 Hex Head Screws

Read and understand instructions before attempting installation

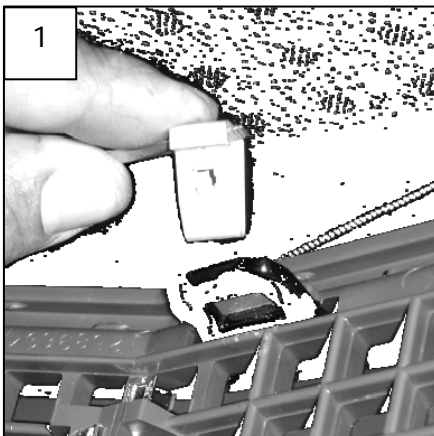

Step 1

Remove the stock bumper grille insert. On the stock insert there are twelve metal clips that hold the insert in place **[1]**. Release all of the clips. From the front side of the grille apply pressure to remove. In order to fully release the grille, there are two push in clip, one on each side that need to be removed.

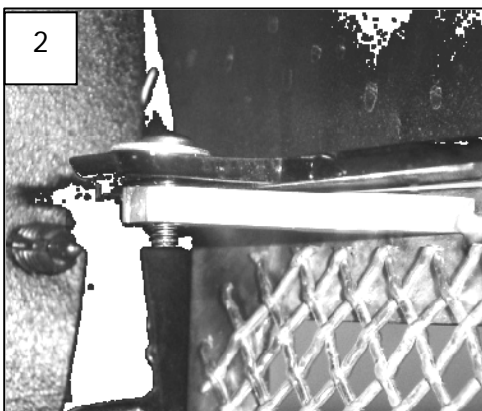

Step 2

Locate your new mesh insert. Center the grille into the opening. While holding the grille from the front side, place a screw downward through the plastic bumper clip and grille mounting tab **[2]**. Place a nylon lock nut on each screw. Repeat this on all remaining screws. Center the grille and tighten all the hardware.
Thank you for purchasing a T-Rex billet grille. 12/8/08