

55192

03-07 CADILLAC
CTS



55192

03-07 CADILLAC
CTS

UPPER CLASS SERIES BUMPER

Tools Required:

Slotted Screwdriver
Philips Screwdriver
7MM & 10MM Sockets


Hardware:

1 Bumper Insert, (Upper Class Series)
4 6-32 Nylon Lock Nuts
4 #6 Flat Washers
4 ½" x ½" L Brackets

Read and understand instructions before attempting installation

Step 1

Open the hood and remove the six plastic fasteners from the top of the grille. Now reach behind the grille and remove four along the bottom and two on each end. Remove the grille.

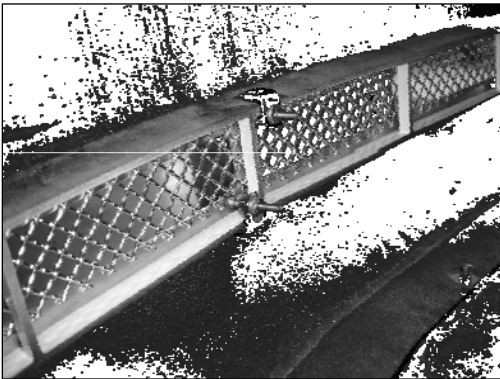

Step 2

Test fit the grille in place. Install the L brackets on the studs; use the washers and nuts to secure the brackets. Do not over tighten the hardware.

Step 3

Re-install the grille onto the vehicle. *Thank you for purchasing your T-Rex billet grille. 5/25/06*

