

25032/25032B
2014 CHEVROLET
CAMARO SS



25032/25032B
2014 CHEVROLET
CAMARO SS


2014 CHEVROLET CAMARO SS **Billet Bumper Grille**

TOOLS REQUIRED:

Flat/Phillips Screwdrivers

PARTS LIST


- (1) grille
- (4) #8 U-Nuts
- (4) #8 6 Head 2" Screws
- (4) Camaro Support Brackets

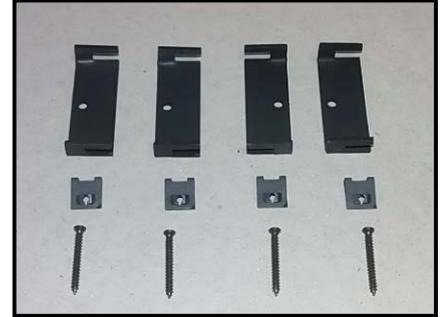

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Grille Installation

Take the four Camaro support brackets and install the four u-nuts onto them (Fig 1).

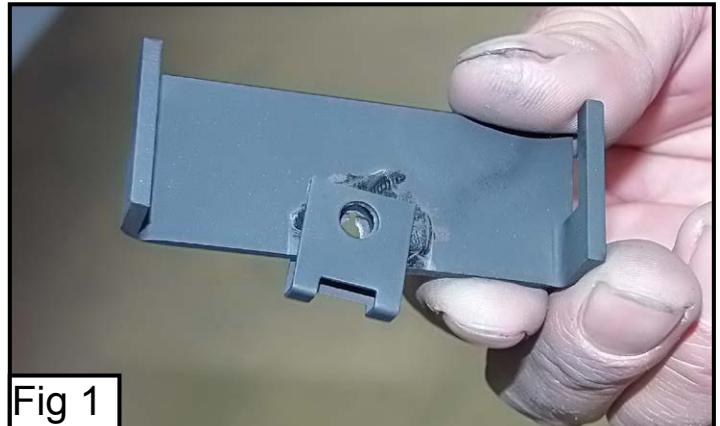

Step 2

From the driver side insert the brackets through the bars and slide the brackets opening through the vertical bars. Make sure to slide towards the driver side and vice versa for the passenger side. Place a bracket on the second and fourth vertical bar from each side. The u-nuts on the brackets should align with the small square tabs with the hole in the center that are welded to the back of the billet grille.



25032/25032B 2014 CHEVROLET CAMARO SS



25032/25032B 2014 CHEVROLET CAMARO SS

Step 3 Grille Installation

With all the brackets installed on the bumper overlay your billet grille into the factory bumper. Make sure the holes on the welded tabs on the back of the billet grille align with the u-nuts installed on the brackets. Insert the 2" screws through the hole in the tab on the back of the billet grille and the u-nuts and tighten. This will keep your grille secured and in place. Installation complete.



Fig 3