

12028
10-13 CHEVY
CAMARO



12028
10-13 CHEVY
CAMARO

10-13 CHEVY CAMARO

Rear Bumper Grille 2 Pc.

TOOLS REQUIRED:

Phillips Screwdriver

PARTS LIST

(4) #8-1" 6 Head Polished Screws
(1) Bumper Grille 2 Pc.

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Install

First, take one of the bumper grilles and insert it into the appropriate half of the rear bumper (Fig 1). Take 2 of the supplied screws and insert them into the 2 small holes in the grille and tighten with a phillips screwdriver (Fig 2), you may have to push a bit to get the screws to penetrate the plastic while tightening. Repeat on the other side of the bumper with the second bumper grille. Installation complete.

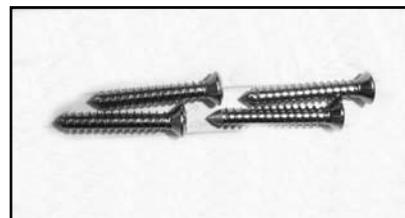


Fig 1



Fig 2