

52125

2011-13 CHEVY CRUZE



52125

2011-13 CHEVY CRUZE

2011-13 Chevy Cruze

Upper Class Bumper Grille

Install time: 15 Mins.

TOOLS REQUIRED:

Screwdriver


PARTS LIST:

- (1) Bumper Mesh Grille
- (4) 6/32 Nylon Lock Nuts
- (4) L-Brackets

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1

- Remove License Place.
- Remove 8 Screws along the Plastic Cover. (Fig. 1)
- Remove 4 Clips Right above the 8 Screws you removed. (Fig. 2)
- Remove Plastic Cover. (Fig. 3)
- Place Bumper Mesh onto the Bumper Opening. (Fig. 4)
- From behind the Mesh Grille, Place the L-Brackets onto the Threaded Studs to Latch onto the Factory Bumper and thread with Provided Nylon Lock Nuts. (Fig. 5)
- To Reinstall the License plate, cut the protruding part along the bottom of the Plastic and Tab. (Fig. 6)

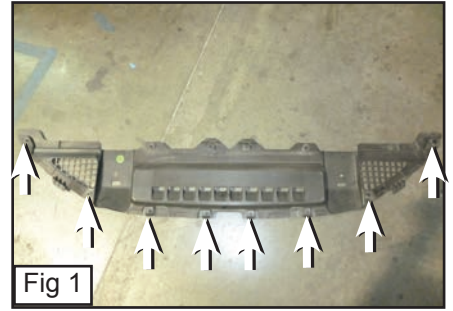

INSTALLATION COMPLETE

