


START HERE The ZROADZ Series Grilles comes into 2 different configurations. One style features the LED Light Bar mounting hidden on the backside, while the other style has exposed mounting provisions on the face side of the grille. Please note this and identify your ZROADZ Grille Series configuration and follow the instruction version that corresponds with your grille.


GRILLE CONFIGURATION STYLE 1



STEP 1 Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

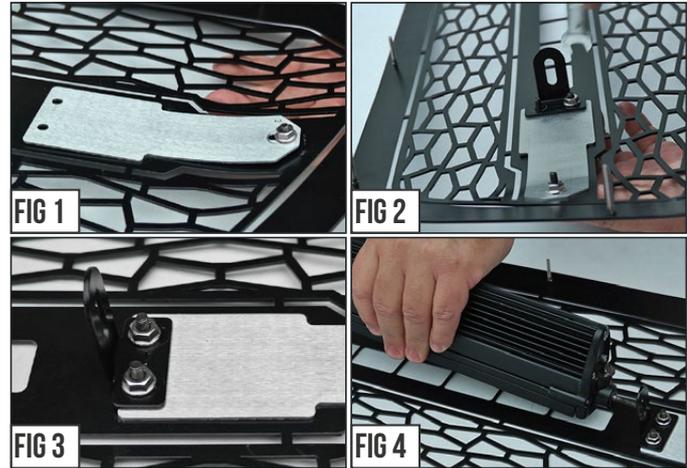

STEP 2 Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 2-4 and then from the backside of grille position LED Light Bar.

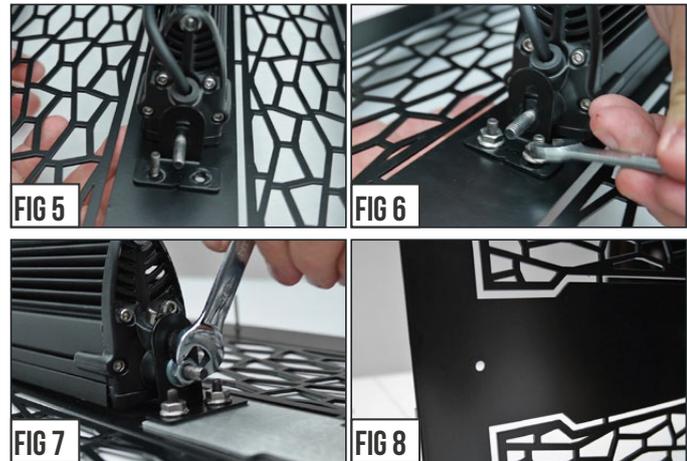


STEP 3 With LED Light placement set, put into position the remaining bracket and the finally tighten LED and all Mounting Brackets into their final secured position.


GRILLE CONFIGURATION STYLE 2



STEP 1 Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

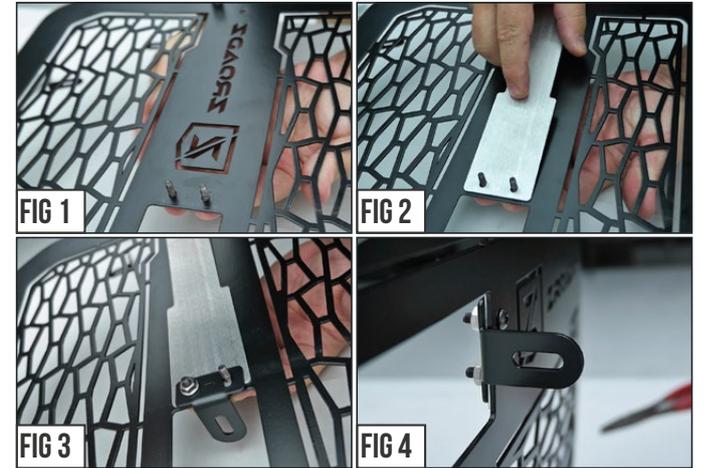

STEP 2 Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 1-4.

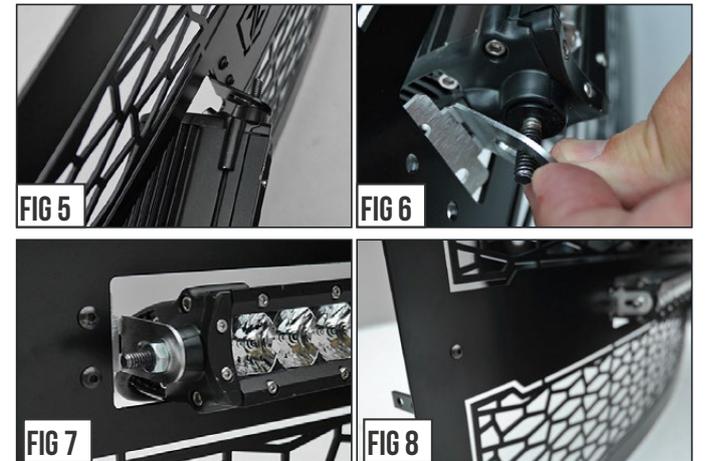

STEP 3 From the face side of grille slip the LED Light bar into place. On the opposite side, position the remaining bracket and finally tighten LED and Brackets into position.

STEP 4 There is a final step for both styles of ZROADZ Grilles. See both of the Figure #8 Images and note that there is an exposed hole. Use the Provided Hardware Button Head Screw and fill the hole and tightened down with Nut. This will create symmetrical look from side to side.

Z311211
2014 Chevrolet
Silverado 1500



Z311211
2014 Chevrolet
Silverado 1500

2014 Chevrolet Silverado 1500 ZROADZ Grille 2pc Replacement

TOOLS REQUIRED:

10mm Wrench or Socket
Flat Head Screwdriver
Ratchet & Extensions

PARTS LIST

(1) X-Metal Upper Grille
(1) X-Metal Lower Grille

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.


Step 1

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)



Step 2

Remove the four 10mm upper bolts securing the factory grille shell to the radiator support. (Fig 2)

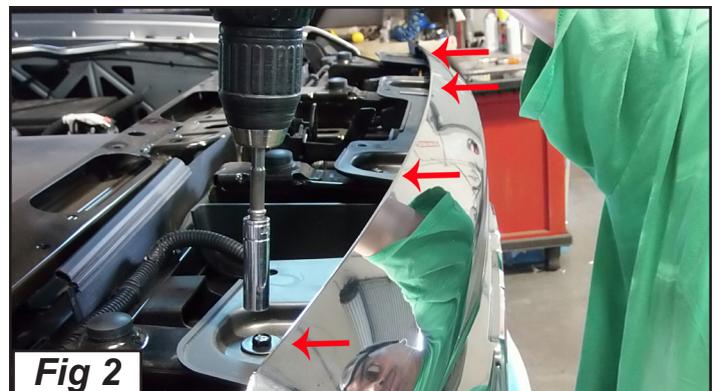

Z311211

2014 Chevrolet
Silverado 1500



Z311211

2014 Chevrolet
Silverado 1500

Step 3

Remove the four 10mm upper bolts securing the lower section of the factory grille assembly. Two are located in the middle and once bolt on each opposite corner. (Fig 3)



Step 4

Remove the two 7mm bolts securing the lower section of the factory grille assembly to the front fender. Two are located in the middle and once bolt on each opposite corner. Repeat on opposite side. (Fig 4)



Step 5

The front grille assembly can now be removed from the vehicle. With the help of an assistant on the opposite side gently tilt the grille assembly up while pulling away from the vehicle at the same time. The assembly is held in place by compression clips. You can now carefully place the grille face side down for the installation of you T-REX Grille (Fig 5)



Step 6

With your grille laying face down remove the rubber intake seal by removing the fourteen 7mm bolts. (Fig 6)



Z311211

2014 Chevrolet
Silverado 1500



Z311211

2014 Chevrolet
Silverado 1500

Step 7

Remove the factory upper and lower grille inserts by using your flat head screwdriver to depress the tabs securing the inner grille to the grille assembly. Work your way around the entire grille assembly and remove the inner grille. (Fig 7)



Step 8

Install the upper and lower X-Metal grille replacements into the factory grille. The X-Metal grilles slide over the factory grille tabs securing the grille in place. (Fig 8)



Step 9

Your installation is now complete. Reattach the rubber intake seal and grille assembly back to the vehicle in reverse order of removal. Make sure you reconnect all disconnected wiring harness and reattach all clips and screws. (Fig 9)

