

**21122/21122B**  
2015 Chevrolet Silverado  
2500/3500 HD



**21122/21122B**  
2015 Chevrolet Silverado  
2500/3500 HD

## 2015 Chevrolet Silverado 2500/3500 HD Billet Grille Overlay 2pc

### TOOLS REQUIRED:


Flat Head Screwdriver  
Phillips Head Screwdriver  
10mm Socket  
Ratchet & Extensions

### PARTS LIST

(8) #8 U Nuts  
(8) 2" Flange Brackets  
(8) 2" 6 Head Screws

### NOTE:

- We recommend painting all areas exposed behind grille black prior to installing for best results.

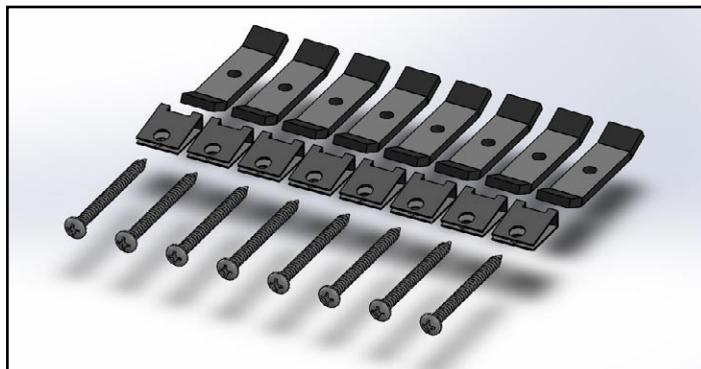

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.** Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [tech@trexbillet.com](mailto:tech@trexbillet.com) to verify fitment or assist with tech questions. All other inquires can be directed to [info@trexbillet.com](mailto:info@trexbillet.com). In the event you do not have internet access please call 1-800-287-5900.

### Step 1

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)



### Step 2


Using your 10mm socket and ratchet remove the four (4) 10mm bolts securing the upper grille assembly to the radiator support. (Fig 2)





**Step 3**

Gently lift the top of grille assembly up while pulling back at the same time. Depress the four (4) release tabs located on the inside of the factory grille assembly with your flat head screwdriver. Firmly grasp the grille pulling away from the vehicle to remove it. (Fig 3)

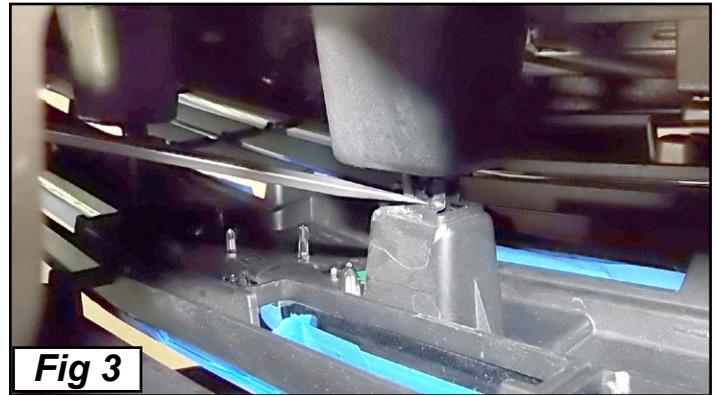

**Step 4**

Attach one #8 U Nut to each of the 2" flange brackets. Sandwich the flange bracket in between the U Nut as shown. (Fig 4)



**Step 5**

While securing the grilles in place stand the grille/ bumper assembly up. Slide the 2" 6 Head screws into the slotted tabs. You will then use the U Bolt/ Flange brackets to secure the T-Rex Billet grille to the factory grille. (Fig 5)



**21122/21122B**  
2015 Chevrolet Silverado  
2500/3500 HD



**21122/21122B**  
2015 Chevrolet Silverado  
2500/3500 HD

**Step 6**

Secure the (8) screws to the grille assembly by attaching the U Bolts/ Flange Brackets to the back of the grille. Make sure the tabs face towards the factory grille as shown. (Fig 6)



**Fig 6**

**Step 7**

Your installation is now complete. Reattach the grille assembly back to the vehicle in reverse order of removal. Make sure you reattach all clips and screws. (Fig 7)



**Fig 7**