

25115
11-12 CHEVY
SILVERADO HD
2500HD/3500



25115
11-12 CHEVY
SILVERADO HD
2500HD/3500

11-12 CHEVY SILVERADO HD 2500HD/3500

Bumper Tow Hook Billet Grilles - 2 Pc.

TOOLS REQUIRED:

Socket & Ratchet Set
Screwdriver Set

PARTS LIST

(4) 3" J Hooks
(4) #8 U-Nuts
(4) 1 1/4" #8 Button Head Screws

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.



Step 1 Billet Installation

Remove the tow hooks. Take the four J-Hooks and install the U-nuts onto them (Fig 1). Take the two screws and insert them through the billet bars and the small square tabs with a hole in the center that are welded to the backside of the billet grilles. Now install the j hooks onto the screws (Fig 2). Only turn the screws a couple of threads into the u-nuts. Insert the billet grilles into the bumper openings (Fig 3). From under the vehicle reach behind the bumper (you can pull the rubber splash guard loose if needed) and latch the j hooks onto the inner lip of the bumper tow hook openings and tighten the screws from the front. Installation complete.

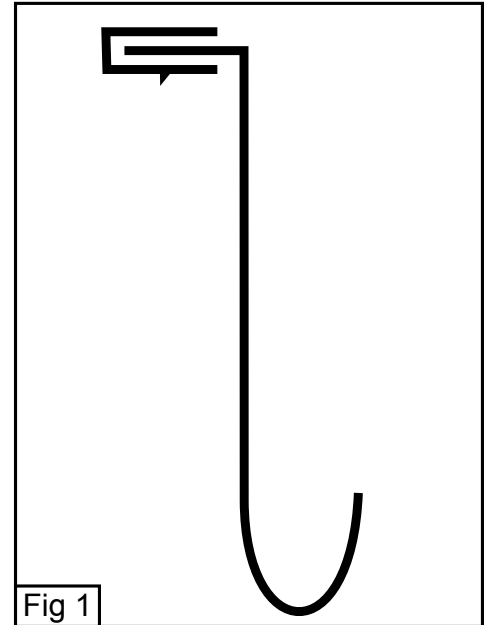


Fig 1

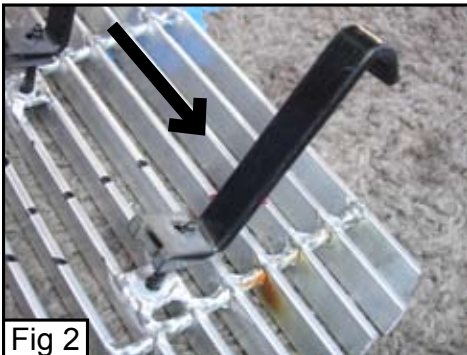


Fig 2



Fig 3

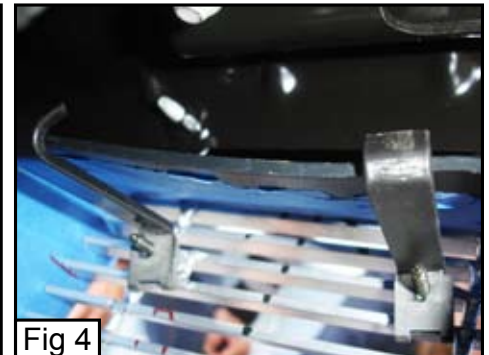


Fig 4