

**6721150 6721151**  
**2011 CHEVY**  
**SILVERADO HD**  
**2500HD/3500**



**6721150 6721151**  
**2011 CHEVY**  
**SILVERADO HD**  
**2500HD/3500**

## **2011 CHEVY SILVERADO HD 2500HD/3500**

### **Bumper Tow Hook Grilles - 2 Pc.**

#### **TOOLS REQUIRED:**

Socket & Ratchet Set  
Screwdriver Set

#### **PARTS LIST**

(2) 4 1/2" Custom Brackets  
(2) 6/32" Nylon Lock Nuts  
(2) Mesh Grilles

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [tech@trexbillet.com](mailto:tech@trexbillet.com) to verify fitment or assist with tech questions. All other inquires can be directed to [info@trexbillet.com](mailto:info@trexbillet.com). In the event you do not have internet access please call 1-800-287-5900.



#### **Step 1 Installation**

Remove the tow hooks. There are several bolts on each tow hook that will need to be removed. To gain access to the rear of the bumper openings unclip the plastic clips on the rubber splash guard from underneath the front of the vehicle. Insert the mesh grilles into the tow hook openings on the bumper cover. From behind the bumper install the two 4 1/2" brackets with a hole in the middle onto the threaded studs on the back of the mesh grilles. Install the two 6/32 nylon lock nuts on the threaded studs and tighten (Fig 1). The bent ends of the brackets will face the front of the vehicle and lay across the plastic vertically. Replace the splash guard. Installation complete.

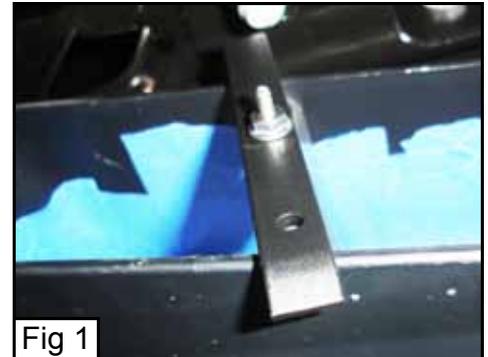


Fig 1