

T-REX

BULLET GRILLES

6720510

07-10 CHEVY

TAHOE

6720510

07-10 CHEVY

TAHOE

2 PC X-METAL SERIES BUMPER

2007-10 TAHOE, SUBURBAN, AVALANCHE

Recommended Tools:

Flat / Slotted Screwdriver
8mm Socket

Parts List / Hardware:

2 Bumper Grilles
4 1/2"x 1/2" L Brackets
4 6-32 Nylon Lock Nuts


Read and understand instructions before attempting installation

Step 1

Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

Step 2

Remove the plastic backing on each tow hook. The backing simply unsnaps using a screwdriver. Set these aside as they will not be reused.

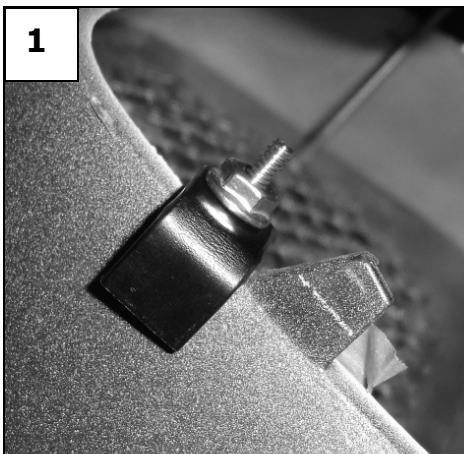

Step 3

Center one of the new grilles into the opening. From behind the bumper; place an L bracket and nylon lock nut on each stud (1). Making sure that the grille is centered; tighten the hardware. Repeat this process on the other side of the bumper.

Thank you for purchasing a T-REX Grille! 04-16-08