

25433

11-13

Chrysler 300C



25433

11-13

Chrysler 300C

11-13 CHRYSLER 300C

Upper Class Bumper Billet Grille

Install time: 30 Mins.

TOOLS REQUIRED:

Plastic Prybar
10mm & 7mm Socket Wrench
Screwdriver

PARTS LIST:

(1) Billet Bumper Grille
(2) #8 U-Nuts
(2) 1' 1/4 #8 Screws
(2) 10/32 Fender Flatwashers




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

Step 2 Grille Bumper Installation

- Insert U-nuts on the Brackets. (Fig. 8)

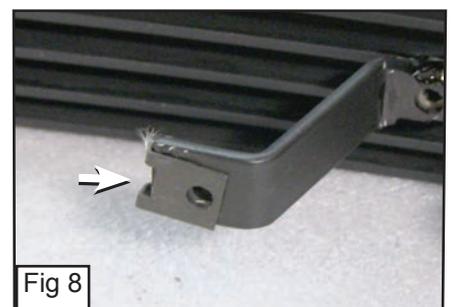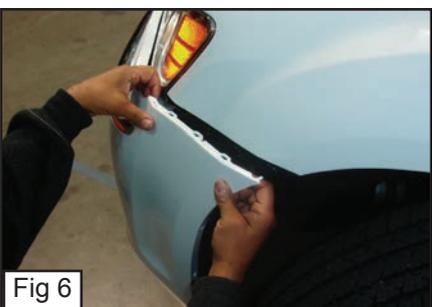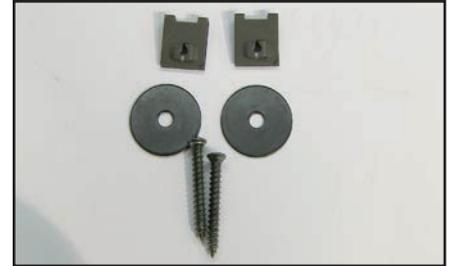

25433

11-13

Chrysler 300C



25433

11-13

Chrysler 300C

11-13 CHRYSLER 300C

Upper Class Billet Grille

- Place Bumper Grille through the Factory Bumper Opening.
- Place the 1' 1/4 Screw through the Fender Flatwasher.
- Insert the Screw behind the Bumper Opening to thread the Bracket on the Billet Grille. (Fig. 9)

Re-Assemble Factory Grille Shell, Clips and bolts.

Installation Complete

