

**55434**  
**55435**

**11-12**

**Chrysler 300C**



**55434**  
**55435**

**11-12**

**Chrysler 300C**

## **11-12 CHRYSLER 300C**

### **2 Pc. Bumper Mesh Grilles**

Install time: 30 Mins.

#### **TOOLS REQUIRED:**

Plastic Prybar  
10mm & 7mm Socket Wrench  
3/16 Drillbit & Drill  
Screwdriver

#### **PARTS LIST:**

(2) Mesh Bumper Grilles  
(6) 10/32 Fender Flatwashers  
(6) 6/32 Nylon Lock Nuts






PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

#### **Step 1 Factory Grille Shell Removal**

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

#### **Step 2 Grille Bumper Installation**

- Place Mesh Grille Over Factory Bumper Opening. (Fig. 8)

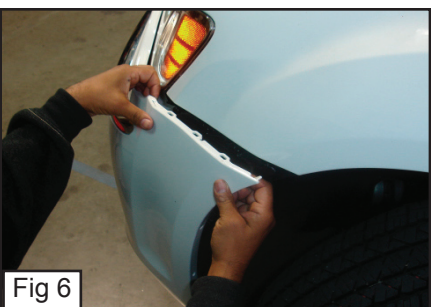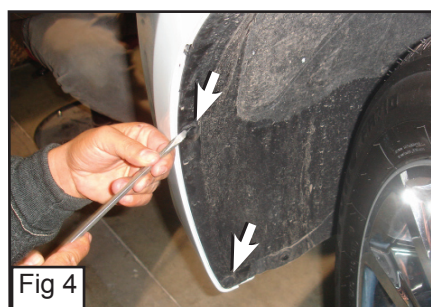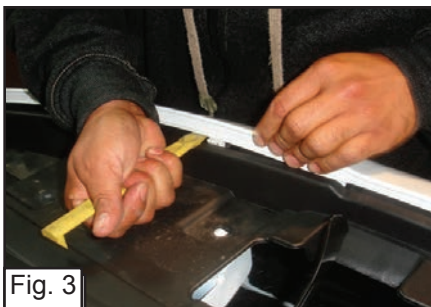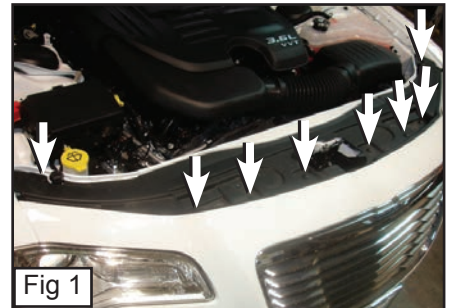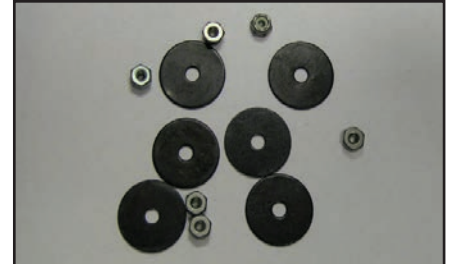

**55434**  
**55435**  
11-12



**55434**  
**55435**  
11-12

**Chrysler 300C**

**Chrysler 300C**

---

**11-12 CHRYSLER 300C**  
**2 Pc. Bumper Mesh Grilles**

- Mark where the Screws on the Mesh Grille are (Make sure the Grille Fits properly through the Factory Opening).
  - Drill a 3/16 Hole where you marked the Screws. (Fig. 9)
  - Place Bumper Mesh in.
  - Insert Flatwashers on the Threaded Screws, Thread with 6/32 Nylon Lock Nut. (Fig. 10)
- Repeat for remaining Threaded Screws.

Installation Complete



Fig 9

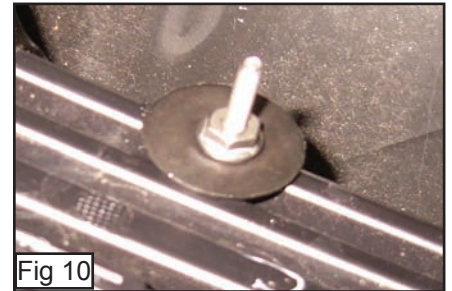


Fig 10