

45433

11-13

Chrysler 300C



45433

11-13

Chrysler 300C

11-13 CHRYSLER 300C

Bumper Mesh Grille

Install time: 30 Mins.

TOOLS REQUIRED:

Plastic Prybar
10mm & 7mm Socket Wrench
Screwdriver
Drill & Drillbit

PARTS LIST:

(1) Sport Bumper	(2) 10/32 Flatwashers
(2) Flatnuts	(2) 6/32 1/2 Screws
(2) #8 3/4 Screws	(2) 6/32 Nylon Lock Nuts
(2) Slotted T-Brackets	






PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.
- Remove Bumper Support (1 Clip on each side)

Step 2 Grille Bumper Installation

- Place Sport Grille through the Bumper Opening. (Fig. 8)

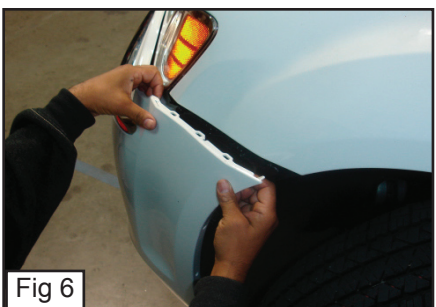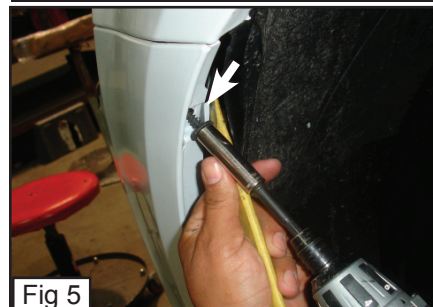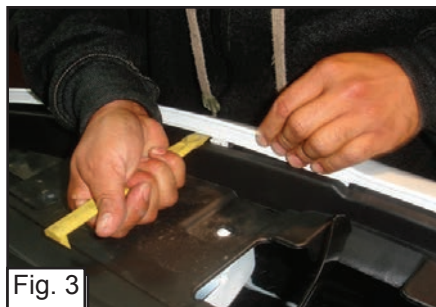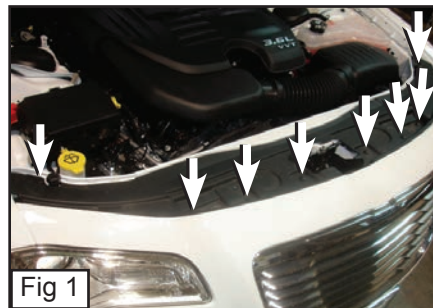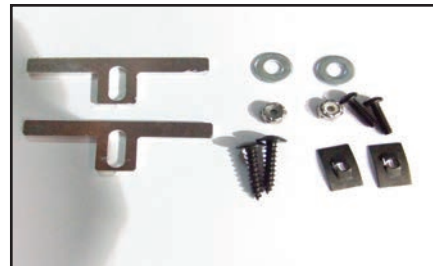

45433
11-13
Chrysler 300C



45433
11-13
Chrysler 300C

11-13 CHRYSLER 300C

Bumper Mesh Grille

- Insert the #8 3/4 Screw through the Bracket on the Mesh Grille upwards and place the T-Bracket in, Thread with Flatnut. (Fig. 9)
 - Drill a 3/16 Hole through the Bracket on the Mesh Grille. (Make sure the Sport Grille Fits in, Not too far in and not too far out.) (Fig. 10)
 - Insert the 6/32 1/2 Screw through the Bracket on the Mesh Grille upwards and Thread with Nylon Lock Nut. (Fig. 11)
- Re-Assemble Factory Grille Shell, Bumper Support, Clips and bolts.

Installation Complete

