

45433

11-12

Chrysler 300C



45433

11-12

Chrysler 300C

11-12 CHRYSLER 300C

Bumper Mesh Grille

Install time: 30 Mins.

TOOLS REQUIRED:

Plastic Prybar
 10mm & 7mm Socket Wrench
 Screwdriver
 Drill & Drillbit

PARTS LIST:




(1) Sport Bumper	(2) 10/32 Flatwashers
(2) Flatnuts	(2) 6/32 1/2 Screws
(2) #8 3/4 Screws	(2) 6/32 Nylon Lock Nuts
(2) Slotted T-Brackets	



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.
- Remove Bumper Support (1 Clip on each side)

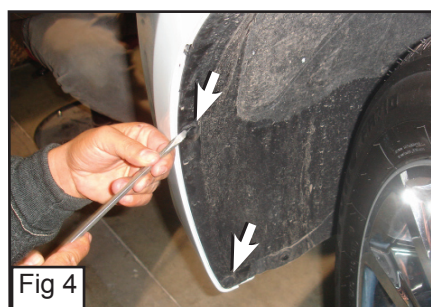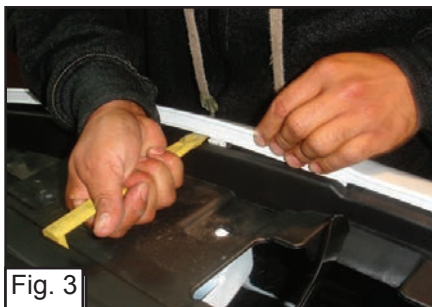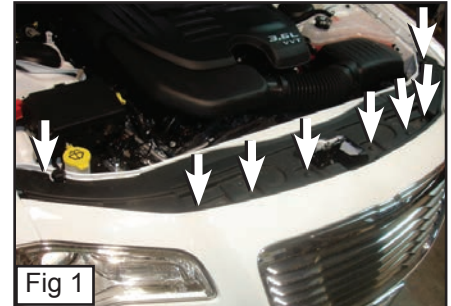

45433

11-12

Chrysler 300C



45433

11-12

Chrysler 300C

11-12 CHRYSLER 300C

Bumper Mesh Grille

- Insert the #8 3/4 Screw through the Bracket on the Mesh Grille upwards and place the T-Bracket in, Thread with Flatnut. (Fig. 9)
 - Drill a 3/16 Hole through the Bracket on the Mesh Grille. (Make sure the Sport Grille Fits in, Not too far in and not too far out.) (Fig. 10)
 - Insert the 6/32 1/2 Screw through the Bracket on the Mesh Grille upwards and Thread with Nylon Lock Nut. (Fig. 11)
- Re-Assemble Factory Grille Shell, Bumper Support, Clips and bolts.

Installation Complete

