

**52433**  
**55433**

**11-13**

**Chrysler 300C**



**52433**  
**55433**

**11-13**

**Chrysler 300C**

## **11-13 CHRYSLER 300C**

### **Bumper Mesh Grille**

Install time: 30 Mins.

#### **TOOLS REQUIRED:**

Plastic Prybar  
10mm & 7mm Socket Wrench  
Screwdriver

#### **PARTS LIST:**

(1) Mesh Bumper Grille  
(2) Flatnuts  
(2) #8 3/4 Screws  
(2) Slotted T-Brackets



**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.**

#### **Step 1 Factory Grille Shell Removal**

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

#### **Step 2 Grille Bumper Installation**

- Place Mesh Grille through the Bumper Opening. (Fig. 8)

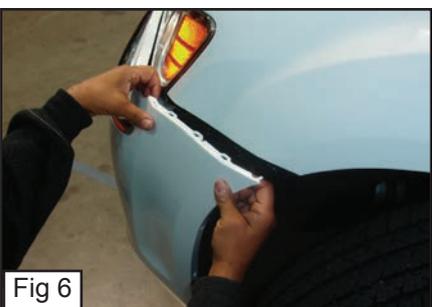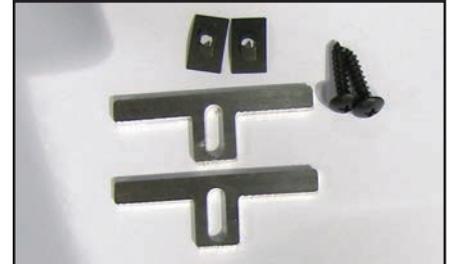

**52433**  
**55433**

**11-13**

**Chrysler 300C**



**52433**  
**55433**

**11-13**

**Chrysler 300C**

---

**11-13 CHRYSLER 300C**

**Bumper Mesh Grille**

- Insert the Screw through the Bracket on the Mesh Grille upwards and place the T-Bracket in, Thread with Flatnut. (Fig. 9)  
Re-Assemble Factory Grille Shell, Clips and bolts.

Installation Complete

