

# 52442

## 11-12 DODGE CHARGER



# 52442

## 11-12 DODGE CHARGER

### 11-12 DODGE CHARGER

#### Upper Class Mesh Bumper

##### TOOLS REQUIRED:

Flathead Screwdriver  
Plastic Prybar  
Socket & Ratchet Set

##### PARTS LIST

(1) Mesh Bumper  
(4) 6/32 Nylon Lock Nuts  
(4) Fender Flatwashers

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS  
BEFORE ATTEMPTING INSTALLATION.

##### Step 1 Factory Grille Removal

Remove 2 Plastic Covers above the Factory Grille Shell. (Fig. 1)

Remove 4 Clips along the Factory Grille Shell. (Fig. 2)



Remove 2 Clips along the Fender. (Fig. 3)

Use a Plastic Prybar to separate the Fender Cover from Bumper Shell and  
remove (1) 10mm Bolt. (Fig. 4)

On each end, Clips secure the side bumper, Carefully pull the side bumper  
outward to release clips. (Fig. 5)

Remove 6 Bolts along the bottom of the Bumper Shell. (Fig. 6)

Remove factory grille and bumper (grille and bumper are connected  
together) (Fig. 7)

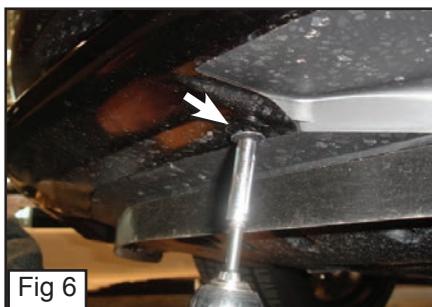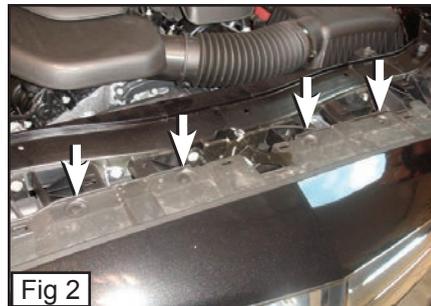

Continue on Page 2

**52442**  
**11-12 DODGE**  
**CHARGER**



**52442**  
**11-12 DODGE**  
**CHARGER**

---

**11-12 DODGE CHARGER**  
**Upper Class Mesh Bumper**

**Step 3 Mesh Bumper Installation**

Place the Bumper Mesh Grille over the Factory Bumper Grille. (Fig. 8)  
Place a Fender Flatwasher on the threaded screw on the Mesh Bumper and  
thread with a 6/32 Nylon Lock Nut. (Fig. 9)  
Repeat for remaining screws.  
Re-Assemble Grille Shell, Bolts and Clips back in.

**Installation Complete**

