

T-REX

Billet Grilles

20422

2008 DODGE
DAKOTA

20422

2008 DODGE
DAKOTA

2008 DODGE DAKOTA

4 PC INSERT/OVERLAY


Tools Required:

Phillip Screw Driver
Socket/Wrench Set

Hardware / Parts List:


2 Billet Inserts
8 Custom Flange Brackets
8 U-Nuts
8 1 ¼" #6 Head Screws

Read and understand instructions before attempting installation
(If you want to install as an overlay; skip to step 3)

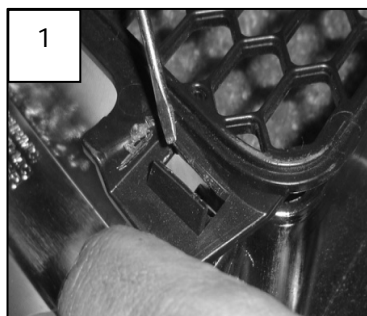

Step 1 INSERT

Open the hood and remove the grille shell from the vehicle. Remove the retaining nuts and clips from the grille shell assembly. Place the grille shell face down on a work surfaces. Use a screw driver to unclip all plastic clips retaining the factory inserts (1). Remove the inserts.

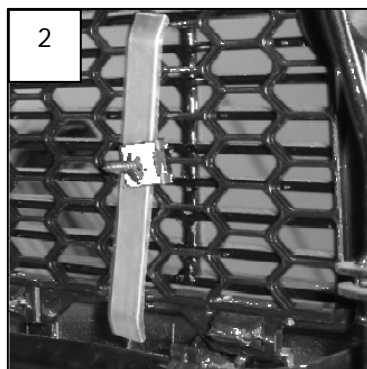

Step 2

From the front side of the grille shell; install one of the inserts. While holding the insert; place a screw though the grille tab and into the flange bracket/ U nut (2). There are two bracket/U nuts per insert. Center the insert and tighten. Repeat this on all remaining inserts.

Step 3 OVERLAY

Open your vehicles hood. From the front side of the grille shell; install one of the inserts. While holding the insert; place a screw though the grille tab and into the flange bracket/ U nut (2). There are two bracket/U nuts per insert (2). Center the insert and tighten. Repeat this on all remaining inserts.

Step 4

Re-install the grille shell assembly onto the vehicle. Make sure the inserts are centered and all the fasteners are tight. Installation is now complete.

Thank you for purchasing your T-Rex billet grille. 2/21/08