

# T-RAX

## Billet Grilles

54462

08 DODGE  
MAGNUM

54462

08 DODGE  
MAGNUM

### UPPER CLASS MESH GRILLE – 4 PC

#### Tools Required:

Slotted screwdriver  
5/16 Drill Bit/Drill  
Tape



#### Hardware:

4 Mesh Inserts Passenger/Driver  
16 U-Nuts  
16 #8 x 3/4" Screws

### Read and understand instructions before attempting installation


#### Step 1

Remove the two-piece plastic cover in front of the radiator support. Remove the clips holding the grille shell in place. Pull up to remove them (1). In each corner is a molded flap that secures the grille shell to the fenders. Pull up and separate the grille shell from the fender (2). This will allow access to the rear of the grille shell.

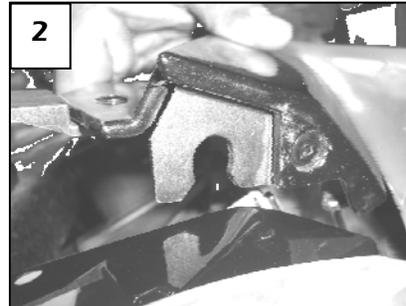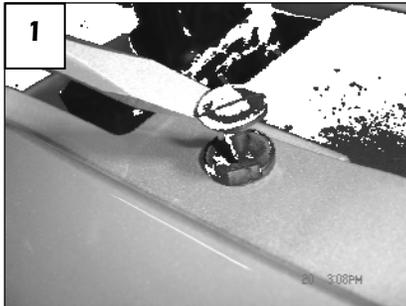

#### Step 2

Remove the factory grille inserts. Depress the clips to remove the inserts. Pull the inserts out of the bumper opening. There are 16 tabs that hold the factory inserts in place. Using the drill; locate the center of each tab and drill a hole (3). **(If you purchased the lower bumper grille; install now)** The mesh inserts can now be installed into the bumper cover. There are driver and passenger sides. Each side has the upper and lower piece. Center the grilles into the bumper opening from the front side of grille. The inserts will only fit one way. The mounting tabs align to the factory locations. (Do not over tighten). Place a u nut on each tab. Using the Philips head screws, place these into each mount and tighten (4).

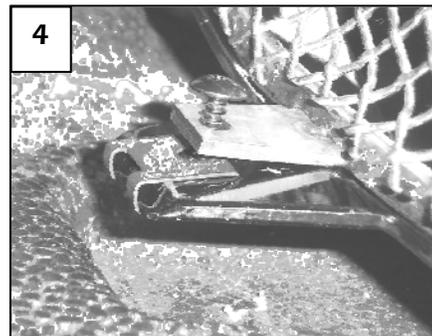

### **Step 3**

Clip the grille shell back into the fender mounts. Replace all of the clips and reinstall the motor covers.

*Thank you for purchasing a T-Rex Grille. 2/14/08*

