

T-REX TRUCK PRODUCTS INC.

25659

06-08 FORD
EXPLORER
BUMPER INSERT

25659

06-08 FORD
EXPLORER
BUMPER INSERT

2006-08 FORD Explorer XLT BUMPER INSERT


Tools Required:

Phillips Screw Driver

Parts List:

- 1 Billet Insert (8 Bars)
- 2 #8 x 1" Screws (#6 Head)
- 2 #8 U-Nuts
- 2 1.5" J Hooks

Read and understand instructions before attempting installation

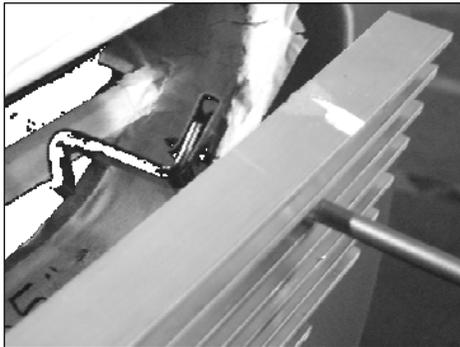

Step 1

Slide a U-nut onto each J hook. Install the screws into the tabs welded onto the billet.



Step 2

Start to thread a J hook onto each screw. Center the billet insert over the factory grille. Wrap the J hooks around the back of the factory grille bars. Use a Phillips screwdriver to secure the billet in place. Do not over-tighten the hardware.

Thank you for purchasing a T-Rex billet grille.
12/27/05

Main grille pictured with optional billet Ford logo (P/N 19560)