

# 54659

06-10 FORD  
EXPLORER



# 54659

06-10 FORD  
EXPLORER

## **2006-10 FORD EXPLORER XLT/LIMITED** **MESH INSERT W/LOGO CUTOUT**


### **Tools Required:**

Phillips / Slotted Screw Drivers  
5/16" Wrench

### **Parts List:**

1 Mesh Insert  
5 1/2" x 1/2" L Brackets  
5 6/32 Nylon Lock Nuts

### **Read and understand instructions before attempting installation**

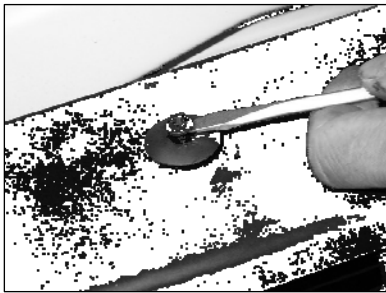

### **Step 1**

Open the hood and remove the plastic retainers along the top of the grille. This will allow access to the backside of the grille.

### **Step 2**

Center the mesh insert over the factory grille. Place an L bracket onto each stud. Place a nylon lock nut onto each stud. Make sure the L brackets hook over the factory grille plastic. Tighten the nuts till snug. Do not over-tighten the hardware.

### **Step 3**

Push the grille shell back into the factory mounting position and re-install the factory grille retainers.

*Thank you for purchasing a T-Rex billet grille. 7/24/07*