

T-REX

Billet Grilles

54662

06-08 FORD
EXPLORER SPORT

54662

06-08 FORD
EXPLORER SPORT

2006-08 FORD EXPLORER SPORT

MESH INSERT W/LOGO CUTOUT


Tools Required:

Phillips / Slotted Screw Drivers
5/16" Wrench

Parts List:

1 Mesh Insert
4 1/2" x 1/2" L Brackets
4 6/32 Nylon Lock Nuts

Read and understand instructions before attempting installation

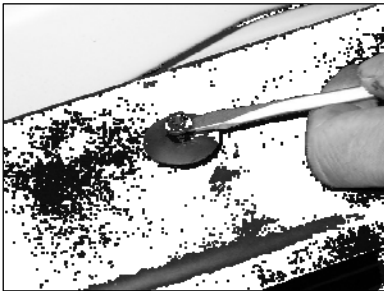

Step 1

Open the hood and remove the plastic retainers along the top of the grille. This will allow access to the backside of the grille.

Step 2

Center the mesh insert over the factory grille. Place an L bracket onto each stud. Place a nylon lock nut onto each stud. Make sure the L brackets hook over the factory grille plastic. Tighten the nuts till snug. Do not over-tighten the hardware.

Step 3

Push the grille shell back into the factory mounting position and re-install the factory grille retainers.
Thank you for purchasing a T-Rex billet grille. 7/17/07