

T-REX

Billet Grilles

21520

05-07 FORD
500 SEDAN

21520

05-07 FORD
500 SEDAN

05-07 FORD 500 SEDAN **BILLET OVERLAY w/ LOGO CUT-OUT**

TOOLS REQUIRED:

Phillips Screwdriver
Slotted Screwdriver
5/16" Wrench

PARTS LIST:

1 Billet Insert (13 Bars)
6 6-32 x 1.5" Machine Screws
6 6-32 Nylon Lock Nuts
6 #6 Flat Washers
6 2" Flange Brackets


Read and understand all instructions before starting installation

Step 1

Open the hood and remove the black plastic top cover. The grille shell may be removed from vehicle for easier installation of billet but is not required. Six hidden bolts secure the grille along the bottom; remove these fasteners along with the top to remove the grille shell assembly from the vehicle. Center the billet over the factory grille. At this time the factory grille mesh may be painted black to hide the grey mesh.

Step 2

Set the billet over the factory grille opening. The mounting tabs will sit over the grille mesh. Insert the long machine screws (from the front) through the tabs welded to the insert. From the back place a flange bracket, washer and hand thread a Nylon lock nut.

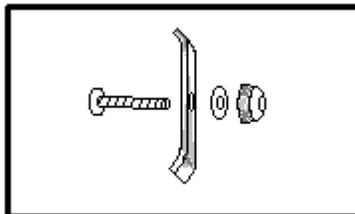

Use the Phillips screwdriver and 5/16" wrench to tighten the hardware. Do not over-tighten; Tighten the insert so it fits snug and even across the shell. Re-install the grille shell assembly back onto the vehicle if needed. ***Thank you for purchasing your T-Rex Billet Grille. 12/14/05***