

**52569**  
**55569**  
**09-12 FORD**  
**F150**



**52569**  
**55569**  
**09-12 FORD**  
**F150**

## **09-12 FORD F150**

### **Upper Class Mesh Bumper**

#### **TOOLS REQUIRED:**

Phillips Screwdriver

#### **PARTS LIST**

(4) #8 1" Screws  
(4) Flat Nuts

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.** Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [tech@trexbillet.com](mailto:tech@trexbillet.com) to verify fitment or assist with tech questions. All other inquires can be directed to [info@trexbillet.com](mailto:info@trexbillet.com). In the event you do not have internet access please call 1-800-287-5900.

#### **Step 1**

Remove the factory license plate holder. Next insert the mesh grille into the bumper opening. Make sure the side of the mesh grille with the two small metal tabs is on the bottom. (Fig 1)

#### **Step 2**

On the bottom edge of the factory bumper are two metal tabs with holes. With the mesh grille inserted into the bumper opening take two #8 screws and put them through the mesh grille and the tabs with holes on the bottom edge of the factory bumper. Use a flat nut on the top of the tabs and tighten with a phillips screwdriver. (Fig 2)

#### **Step 3**

Now take two #8 screws and insert them through the tabs on the bottom of the mesh grille and the two rectangle slots in the plastic bumper opening. On the backside of the plastic use a flat nut to secure the screws and tighten with a phillips screwdriver. (Fig 3) Installation complete.

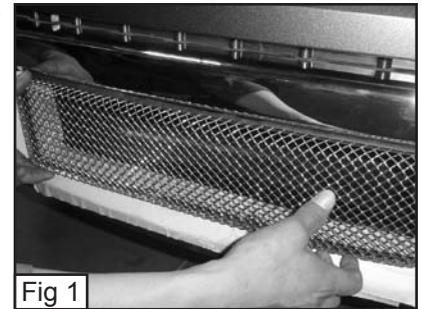
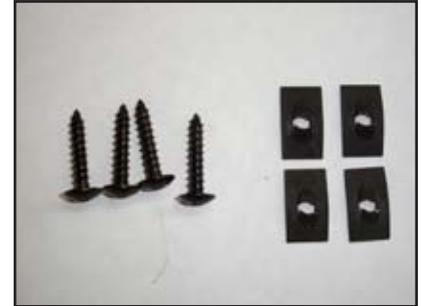


Fig 1

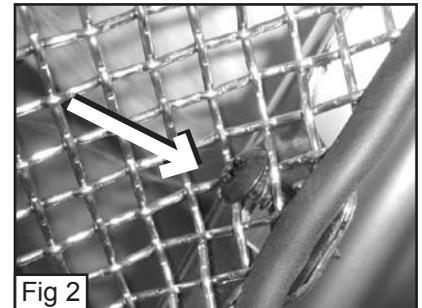


Fig 2

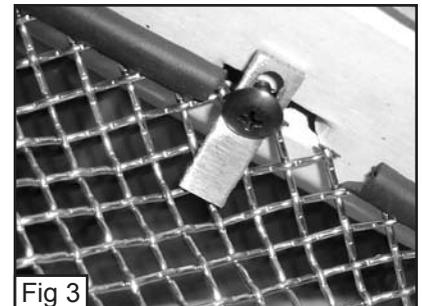


Fig 3