

**55546
52546
11-13 FORD
SUPER DUTY**



**55546
52546
11-13 FORD
SUPER DUTY**

11-13 FORD SUPER DUTY


Bumper Mesh

TOOLS REQUIRED:

Socket & Ratchet Set

PARTS LIST

(2) Super Duty Custom Brackets
(1) Bumper Mesh

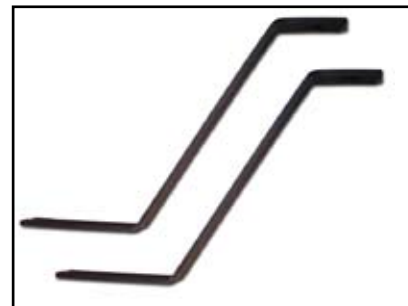

Step 1

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.


Remove the 2 bolts on the outter edges in the factory bumper opening (Fig 1).



Fig 1

Step 2

From underneath the vehicle, take the bumper mesh and insert it from behind the bumper into the factory bumper opening.

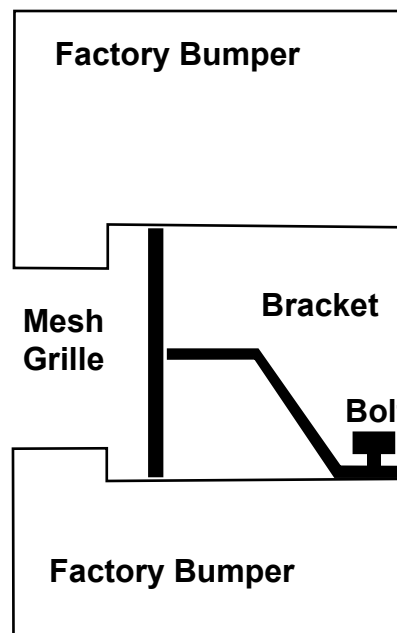

Step 3

While holding the bumper mesh up against the inside of the bumper, take the two brackets that came in the hardware bag and the bolts you removed from the factory bumper and insert them through the end of the bracket with the hole in it. The end of the bracket with a small notch in it will press against the mesh grille, tighten the bolts (Fig 2). Installation complete.