

11564X

**08-10 FORD
SUPER DUTY**
ALL MODELS



11564X

**08-10 FORD
SUPER DUTY**
ALL MODELS

08-10 FORD SUPER DUTY ALL MODELS

Mesh Side Vent Insert 2 Pc.

TOOLS REQUIRED:

Plastic Pry Bar
Flat Screwdriver
Needle Nose Pliers

PARTS LIST

(4) Round Pressure Clips
(1) MeshGrille Kit - 2 Pc.

Step 1 Factory Side Vent Removal

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE

INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900. Apply masking tape to the fender (around the factory side vent). Each vent consists of two pieces and is secured by eight metal pressure clips. The area with the F-250 or F-350 script is a separate piece from the lower section. The piece with script must be removed first (Fig 1). Use a plastic interior removal tool or slotted screw driver to pry the top assembly from the fender. Then remove the lower assembly.



Fig 1



Fig 2

Step 2 Factory Grille Dissassembly

With the factory grilles removed from the vehicle, the factory grilles will now be disassembled. Remove the 2 round clips from the factory grille by using a small flat screwdriver to pry the clips loose and remove the plastic mesh from the factory grilles (Fig 2).



Fig 3

Step 3 Mesh Grille Installation

Now take the two mesh grilles and insert them into the factory vent grille housings making sure they are fully seated into the factory vent housing. Now take the four round pressure clips supplied with the mesh grilles and install them onto the plastic posts in the center backside of the factory vent housing with the raised dome portion facing upward (Fig 4). Make sure to fully press the clips down so they are tight and holding the mesh grilles secure. Reassemble the two sections of the factory grille and reinstall the grilles into the vehicle. Installation complete.

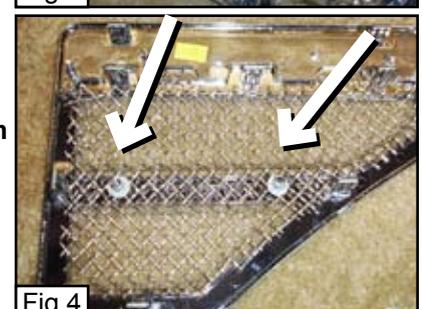


Fig 4

Thank you for purchasing a T-Rex Grille. 4/5/10