

**21208
21208B
2014 GMC
SIERRA 1500**



**21208
21208B
2014 GMC
SIERRA 1500**


2014 GMC SIERRA 1500 **4 Pc. Billet Grille**

TOOLS REQUIRED:

Flat/Phillips Screwdrivers

PARTS LIST

- (9) 1 x 1/4" x 55 d. L Brackets
- (9) # U-Nuts
- (9) #8 (6 head) 1 1/4 screws
- (1) 4 Pc. Grille

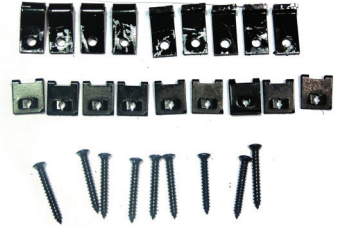

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Billet Grille Installation

Take the u-nuts and install them onto the brackets with the barb on the u-nut on the bent side of the bracket aligned with the hole in the bracket (Fig 1). Locate the small square tabs with a hole in the center located on the back of the four billet grilles. Take the screws and insert them through the billet bars and the small hole on the tabs. Place the brackets with the u-nuts pre-installed, onto the screws with the bent end of the bracket pointed towards the billet grille so that the mount will grab and pinch the Billet Grille into place. Turn the screw a couple of turns to get the screw started into the u-nuts (Fig 2). Take the billet grille and insert it into the appropriate opening in the factory grill, turn the brackets sideways to fit between the plastic bars in the factory grille (Fig 3). With the billet grille inserted into the factory grille use a small screwdriver to reach between the billet bars and turn the bracket so that it latches onto the plastic bars in the factory grille, tighten the screws with another screwdriver (Fig 4). Repeat this step on the remaining billet grilles. Installation complete.

