

20211/20211B

2015 GMC Sierra
2500/3500 HD



20211/20211B

2015 GMC Sierra
2500/3500


2015 GMC Sierra 2500/ 3500 HD Billet Grille Insert

TOOLS REQUIRED:

Flat Head Screwdriver
Phillips Screwdriver
Cutting Wheel
10mm Socket
Ratchet & Extensions
3/6" Drill Bit
Drill

PARTS LIST

8- #8 FLAT NUTS
10- #8 SCREW 3/4"
4- 6/32" NYLON LOCKS
4- 1"x3/16" FENDER WASHERS
4- J HOOKS 6/32x 1.5"
4- OEM EMBLEM SPACER
2- GRILLE MOUNT TABS

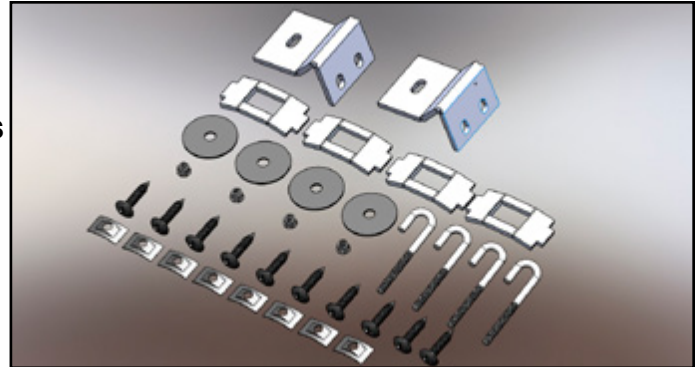

NOTE:

- We recommend painting all areas exposed behind grille black prior to installing for best results.

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)



Step 2

Using your 10mm socket and ratchet remove the four (4) 10mm bolts securing the upper grille assembly to the radiator support. (Fig 2)



20211/20211B

2015 GMC Sierra
2500/3500 HD



20211/20211B

2015 GMC Sierra
2500/3500 HD

Step 3

Gently lift the top of grille assembly up while pulling back at the same time. Depress the four (4) release tabs located on the inside of the factory grille assembly with your flat head screwdriver. Firmly grasp the grille pulling away from the vehicle to remove it. (Fig 3)



Step 4

Using a cutting wheel carefully cut away the center section of the grille assembly. Afterwards use a file or sandpaper to clean up any sharp or jagged edges. (Fig 4)



Step 5

Flip grille face down and place billet grille into grille opening. Align the tabs to the inner grille shell. Carefully drill a 3/16" hole, use the pre drilled holes on the grille tabs as guides . (Fig 5)



20211/20211B

2015 GMC Sierra
2500/3500 HD



20211/20211B

2015 GMC Sierra
2500/3500 HD

Step 6

Secure the grille assembly with the screws and U nuts. The grille mounting tabs have two sets of holes drilled due to variances between the Standard HD and Denali HD. (Fig 6)



Step 7

Your installation is now complete. Reattach the grille assembly back to the vehicle in reverse order of removal. Make sure you reattach all clips and screws. (Fig 7)



20211/20211B

2015 GMC Sierra
2500/3500 HD



20211/20211B

2015 GMC Sierra
2500/3500 HD

2015 GMC Sierra 2500/3500 HD **OEM Emblem Installation Kit**

TOOLS REQUIRED:

10mm Wrench
Locking Pliers

NOTE: Factory Emblem is not supplied with grille kit.

Step 1

Remove the OE emblem from the factory grille by depressing the tabs securing the emblem to the grille. (Fig 1)



Step 2

Break off the center tab from the back of the emblem. (Fig 2)



20211/20211B
2015 GMC Sierra
2500/3500 HD



20211/20211B
2015 GMC Sierra
2500/3500 HD

Step 3

Center the emblem in your new grille. From the back slide the two J hooks into the center mounting tabs of the emblem. (Fig 3)



Fig 3

Step 4

Secure emblem to the grille with the included spacer, flat washer and nuts. (Fig 4)

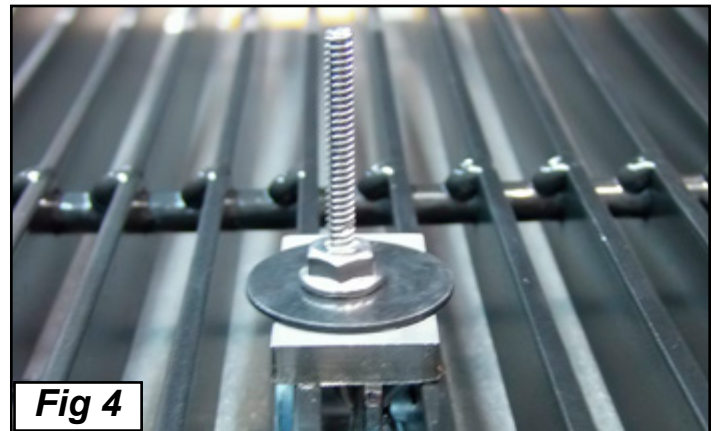


Fig 4

Step 5

Your emblem installation is now complete. (Fig 5)



Fig 5