

44172
46172
07-13 GMC
YUKON



44172
46172
07-13 GMC
YUKON

2007-13 GMC YUKON **SPORT SERIES GRILLE**

Recommended Tools:

Phillips & Slotted Screwdriver
7mm, 8mm, 10mm Socket
Masking Tape
Drill/Drill Bit Set


Parts List / Hardware:

- 1 Sport Series Grille
- 7 Custom Snap Brackets W/end Holes
- 2 Custom Snap Brackets
- 9 #8 Flat Washers
- 9 #8 x 3/4" Screws

Read and understand instructions before attempting installation

Step 1

Will not fit Denali models (OE Yukon model grille assembly required for installation on Denali models). Test fit the grille over the factory grille. Use a slotted screwdriver to remove the fasteners holding the plastic radiator cover. Remove the six 10mm and two 7mm bolts along the top of the grille. Remove the two 10mm bolts along the bottom (one in each corner). Place a block of wood or something similar between the top of the grille and the metal core support. This will allow access to the back of the grille. Use a slotted screwdriver to unclip the molded clips behind the grille. Remove the grille from the bumper.

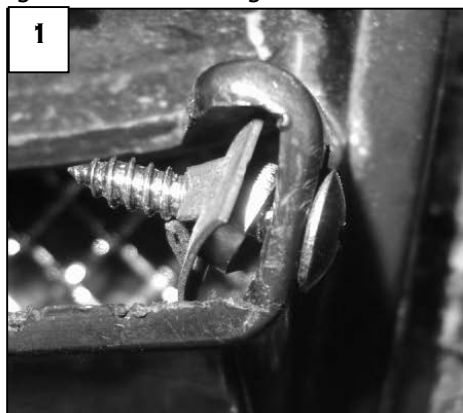

Step 2

Install the new grille into the opening. Flip the grille over. Using the 7 snap brackets, place these evenly around the side and lower area making sure the hooks are hooked to the mesh. Hold the bracket snug and against the plastic siding using vice grips. Drill a hole using the hole in the bracket as a guide. Place a screw through the plastic into the bracket and into the flat nut (1). Use the 2 remaining snap brackets on the top center of the grille (2). Make sure that the grille is tightened.

Step 3

Align the grille assembly into the core support and fasten the bolts. Re-install the radiator cover.

Thank you for purchasing a T-Rex Billet Grille. 10/08/08

