

25811

**08-10 INFINITI
G-37 NON SPORT**



25811

**08-10 INFINITI
G-37 NON SPORT**

BILLET BUMPER GRILLES

Tools Required:

Phillip / Slotted Screwdrivers
8mm, 10mm Socket



Hardware / Parts List:

2	Billet Bumper Grilles	4	#6 Head 1 ½" Screws
4	2" Flange Brackets	4	U Nuts

Read and understand instructions before attempting installation

Step 1

Re move the lower motor access panels to access the back of the bumper. Center the insert into the opening on one side. Place the provided U nuts on each of the provided flange brackets (1). From the front side of the grille; place the provided screws through the grille brackets and into the U-nuts. Making sure that the grille is centered, tighten down the hardware (2). Repeat on the other side.

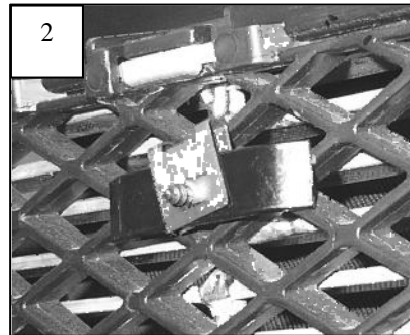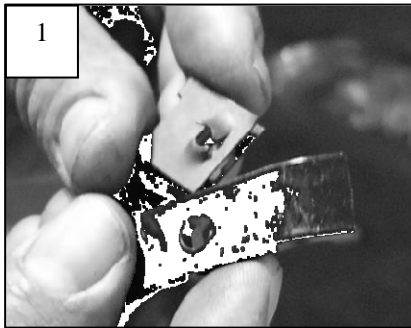

Step 2

Secure the coolant overflow tank. Re-install the wiring harness, radiator cover; and lower motor access panel. ***Thank you for purchasing your T-Rex grille. 2/22/08***