

55811

**08-10 INFINITI
G-37 NON SPORT**



55811

**08-10 INFINITI
G-37 NON SPORT**

UPPER CLASS SERIES MESH BUMPER GRILLE

Tools Required:

Phillip / Slotted Screwdrivers
8mm, 10mm Socket
1/8" Drill bit

Hardware / Parts List:

2 Mesh Bumper Grille 8 1/8" Fender Washer
8 6-32 Nylon Lock Nuts

Read and understand instructions before attempting installation




Step 1

Remove seven plastic fasteners along the top front side of the grille; use a small screwdriver to pull the center from each fastener (1). Remove twelve 10mm bolts securing the radiator cover. Two of these are located on each side of the vehicle under the hood seal in the corner (2). Remove the bracket on each side. Un pop the bumper cover from the fender.




Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (3). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, unclip the hood latch cord and remove cover.

Remove five 10mm nuts behind the grille. Depress the molded clips retaining the grille and remove from the front.

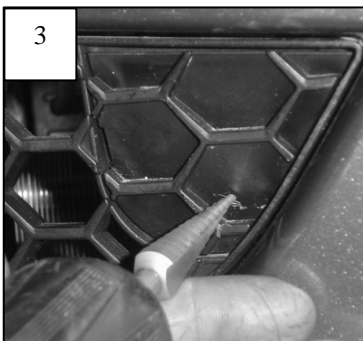

Step 2

Center the insert into the opening. Slide the studs into the factory mesh. Drill a hole into the black backing to allow the stud to protrude through the bottom backing. The driver side needs one hole drilled. The passenger side requires two holes drilled [3]. Re move the lower motor access panels to access the back of the grille. On each of the studs; place a washer and nylon lock nut [4]. Making sure that the grille is centered, tighten down the hardware.

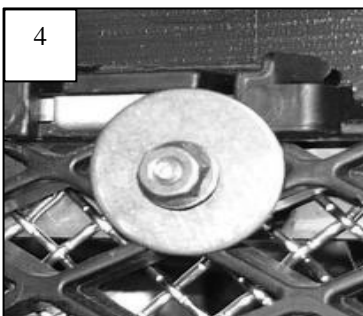

Step 3

Re-install the wiring harness and radiator cover. Secure the coolant overflow tank. ***Thank you for purchasing your T-Rex grille. 12/08/07***