

55808

**07-08 INFINITI
G-35 SEDAN SPORT MT6**



55808

**07-08 INFINITI
G-35 SEDAN SPORT MT6**

UPPER CLASS SERIES MESH BUMPER


Tools Required:

Phillip / Slotted Screwdrivers 10mm Socket
5/16 Socket

Hardware / Parts List:

1 Mesh Bumper (Center)
4 #10 Flat Washers
4 6-32 Nylon Lock Nuts


Read and understand instructions before attempting installation

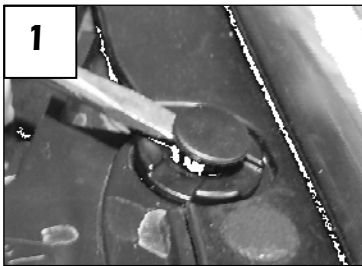

Step 1

The upper grille must be removed to install the bumper grilles.

Remove six plastic fasteners along the top of the grille; use a small screwdriver to pull the center from each fastener (1). Remove five 10mm bolts securing the radiator cover.

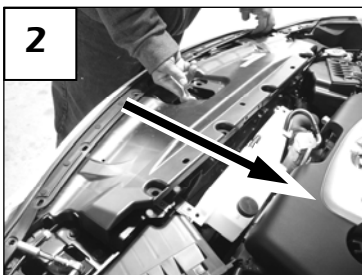

Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (2). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, remove (2).

Remove five 10mm nuts behind the grille. Depress the molded clips retaining the grille and remove from the front.



Step 2

Place the grille into the bumper opening. Install the washers and nuts on the backside of the grille to secure it in the bumper. (3)

Step 3

Re-install the wiring harness and radiator cover. Secure the coolant overflow tank. *Thank you for purchasing your T-Rex billet grille. 2/29/07*