

T-REX

Billet Grilles

21769

2008 NISSAN
ALTIMA COUPE

21769

2008 NISSAN
ALTIMA COUPE

2008 NISSAN ALTIMA **BILLET GRILLE INSERT**

Tools Required:

8mm Socket or Nut Driver
Flat/Phillips Screwdrivers

Hardware / Parts Included:

1 Billet Insert	4 1.5 Machine Screws
4 6-32 Nylon Nuts	4 #10 Washers
2 2" Flange Brackets	2 1 ¼" #6 Head Screws
2 U Nuts	

Read and understand instructions before attempting installation


Step 1

To remove the factory grille shell; use a small screwdriver to pull the center from each fastener. Do not discard the fasteners. Next, lightly pull the top of the grille assembly forward. From the back side of the grille; use your fingers or screw driver to depress the molded clips along the bottom and top of the grille. The grille can now be removed from the front side of the bumper. Remove all clips on the upper lip of the bumper cover. The holes they plug will be used.



Step 2

Place the U nuts onto the flange brackets. From the front side of the grille; center the billet into the grille opening. While holding the grille in place; place a screw through the front side into the bracket and into the U nut on the flange bracket (1). Tighten till snug. Place the upper screws through the grille brackets. These screws will protrude through the top lip holes. Place a washer and nylon lock nut on each of the four screws (2). Make sure that the grille is centered and tighten all the hardware.

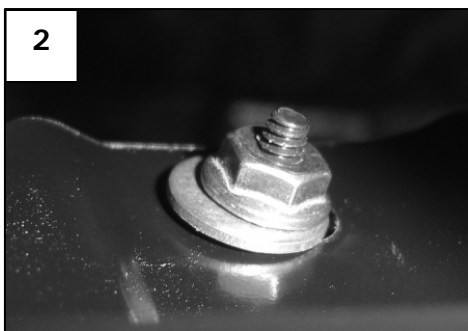

Step 3

Re install all the factory motor cover and all factory hardware.

Thank you for purchasing a T-Rex Billet Grille.

04/15/08