



51769 54769

**2008 NISSAN  
ALTIMA COUPE**

51769 54769

**2008 NISSAN  
ALTIMA COUPE**

**2008 NISSAN ALTIMA  
UPPER CLASS MESH GRILLE**


**Tools Required:**

8mm or 5/16 Socket  
Slotted / Philips Screwdrivers

**Hardware / Parts Included:**

1 Mesh Grille  
8 6-32 Nylon Nuts  
8 2" Flange Brackets


**Read and understand instructions before attempting installation**

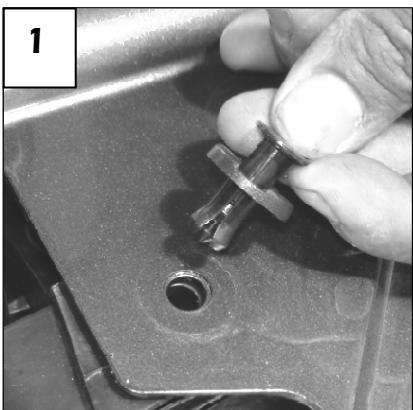

**Step 1**

Use a slotted screwdriver to remove eight plastic fasteners on top of the bumper cover (above the grille); pull the center from each fastener (1).

The upper corners of the bumper cover and grille are secured to the core support with a retaining clip. Pull the bumper cover forward on one end; from behind the grille, use a slotted screwdriver to depress the clip (2 & 3). Repeat on other side.

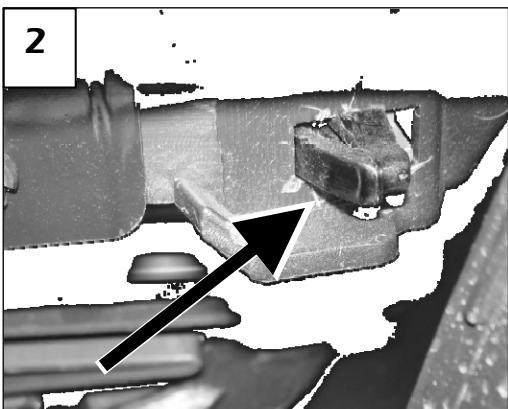

*(Continued)*

## **Step 2**

Remove the air intake shield in front of the intake (4). Do not remove the intake behind the core support. Two plastic fasteners secure the shield. Remove the shield (5).




## **Step 3**

Pull the top of the grille assembly forward. Use a finger or screwdriver to depress the remaining molded clips along the top and bottom of the grille (6). Removal of a lower clip is shown in diagram (6).

There are four clips on top and four on the bottom.

Now remove the factory grille from the front of the bumper.

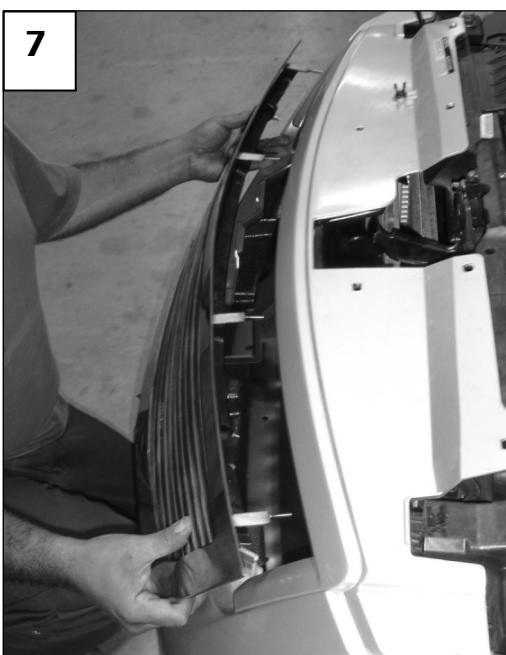

## **Step 4**

Center the billet into the bumper opening (7). The mounting studs align to the factory grille slots. From behind the grille; install a flange bracket and a nylon lock nut.

Make sure the grille and frame is centered; tighten the hardware until the grille is held firmly in place. Loosen the hardware and adjust if needed.

Re-install the air intake shield.

Install the retaining fasteners on top of the bumper cover.

***Thank you for purchasing a T-Rex Billet Grille. 1/9/07***