

55769

**08-09 NISSAN
ALTIMA COUPE**



55769

**08-09 NISSAN
ALTIMA COUPE**

2008-09 NISSAN ALTIMA UPPER CLASS MESH BUMPER


Tools Required:

8mm or 5/16 Socket
Slotted / Philips Screwdrivers

Hardware / Parts Included:

1 Mesh Bumper Grille
2 6-32 Nylon Nuts
2 2" J- Hooks



Read and understand instructions before attempting installation

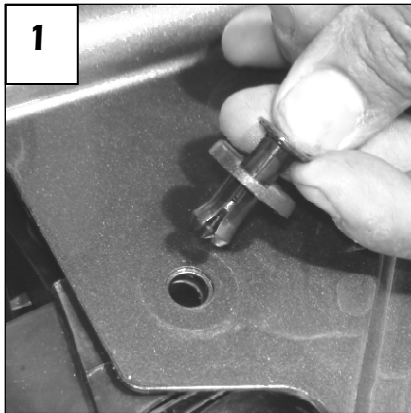

Step 1

Use a slotted screwdriver to remove eight plastic fasteners on top of the bumper cover (above the grille); pull the center from each fastener (1).


The upper corners of the bumper cover and grille are secured to the core support with a retaining clip. Pull the bumper cover forward on one end; from behind the grille, use a slotted screwdriver to depress the clip (2 & 3). Repeat on other side.

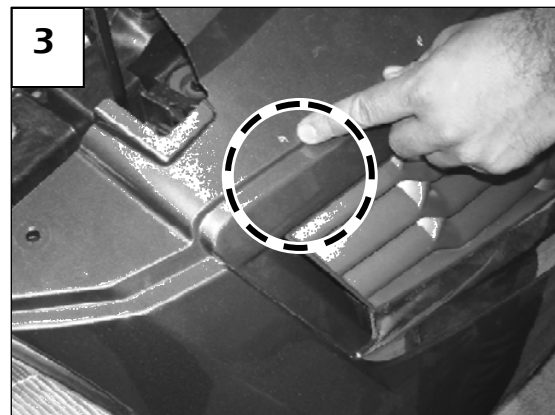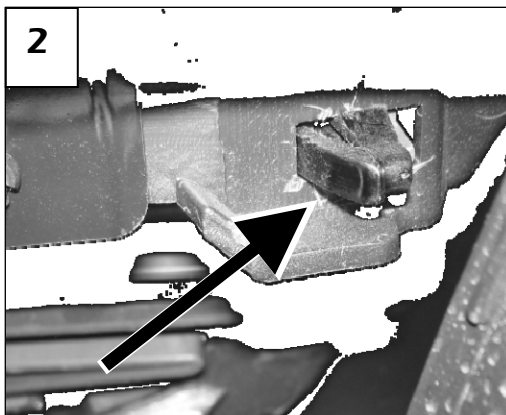

55769 (Continued)

Step 2

Remove the air intake shield in front of the intake (4). Do not remove the intake behind the core support. Two plastic fasteners secure the shield. Remove the shield (5).

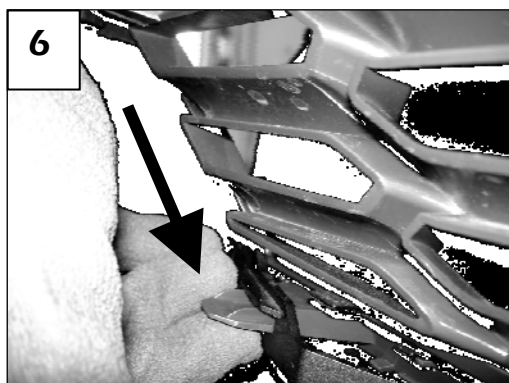

Step 3

Pull the top of the grille assembly forward. Use a finger or screwdriver to depress the remaining molded clips along the top and bottom of the grille (6). Removal of a lower clip is shown in diagram (6).

There are four clips on top and four on the bottom.

Now remove the factory grille from the front of the bumper.



Step 4

Center the mesh over the bumper opening. From behind the grille; using a J hook and nylon lock nut; place on the welded on stud (7). Tighten the grille snug. Make sure the insert is centered. Loosen the hardware and adjust if needed. Do NOT OVERTIGHTEN! Re-install the factory grille.

***Thank you for purchasing a T-Rex Billet Grille.
11/12/07***