

# 21784

**08-12 NISSAN  
ARMADA  
BILLET OVERLAY**



# 21784

**08-12 NISSAN  
ARMADA  
BILLET OVERLAY**

## **08-12 NISSAN ARMADA** **3 PC Billet Overlay W/Logo Cut Out**


### **Tools Required:**

Phillips / Slotted Screwdrivers  
5/16" Wrench or Nut Driver

### **Hardware / Parts Included:**

|                                 |                   |
|---------------------------------|-------------------|
| 1 Billet Insert (Center)        | 8 #10 Washers     |
| 2 Billet Inserts (Right & Left) | 8 1/2" L Brackets |
| 8 6-32 x 2 Machine Screws       |                   |
| 8 6-32 Nylon Lock Nuts          |                   |

### **Read and understand instructions before attempting installation**

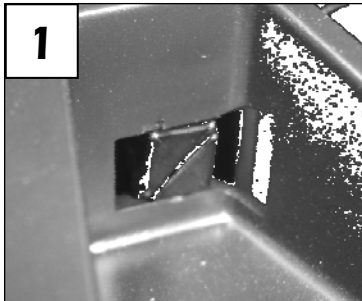

### **Step 1**

Test fit the grilles in place. On top of the grille; use a small slotted screwdriver to release (1/4 turn) four plastic fasteners (1). Slightly pull the grille forward. Now release three clips along the bottom of the grille. Remove the grille. The side openings have plastic air shrouds held in place by molded clips. Remove the air shrouds. Use a heat gun or hair dryer to remove the OE logo from the factory grille.



### **Step 2**

Install a machine screw into mounting holes welded to grilles. Place the center insert over the factory grille. Install an L bracket, washer and nut onto each screw. Wrap the brackets around the mesh (2). Tighten the hardware. Repeat this process on the side inserts.

***Thank you for purchasing a T-Rex Billet Grille. 11/15/07***