

**20758**  
**09-12 NISSAN**  
**MAXIMA**



**20758**  
**09-12 NISSAN**  
**MAXIMA**

**09-12 NISSAN MAXIMA**  
***BILLET INSERT***


**Tools Required:**

Slotted Screwdriver

**Hardware / Parts Included:**


- 1 Billet Insert
- 4 Push In Clips

**Read and understand instructions before attempting installation**

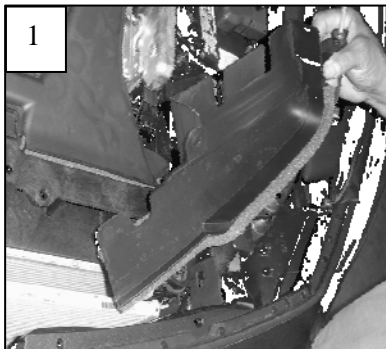

**Step 1**

Open the hood and remove the factory plastic radiator cover. Remove the factory air intake plate on the driver side of the vehicle (1). Now remove the factory grille shell; release the molded clips along the perimeter of the grille. If installing a bumper insert; install at this time; then proceed to Step 2.

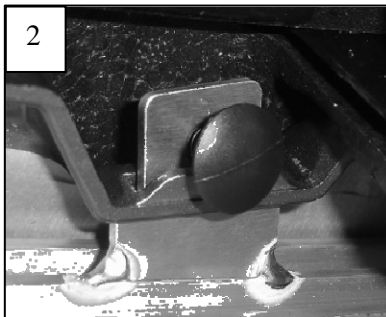

**Step 2**

Locate the new grille insert. Place the grille into the factory opening. The welded tabs will fit into the factory mounting holes (2). Place the provided clips into each of the tabs.

**Step 3**

Replace the factory air intake plate. Reinstall the radiator cover and all factory clips.

***Thank you for purchasing a T-Rex Billet Grille. 7/24/08***