

25758
09-12 NISSAN
MAXIMA
BUMPER INSERT



25758
09-12 NISSAN
MAXIMA
BUMPER INSERT

2009-12 NISSAN MAXIMA
BUMPER INSERT

Tools Required:

Phillips Screwdriver


Hardware / Parts Included:

1 Billet Insert	2 2.5" J Hooks
4 #8 x 1.5" Screws (#6 Head)	4 #8 U Nuts
2 1" J Hooks	

Read and understand instructions before attempting installation

Step 1

Open the hood and remove the factory plastic radiator cover. Remove the factory air intake plate on the driver side of the vehicle. Now remove the factory grille shell; release the molded clips along the perimeter of the grille.

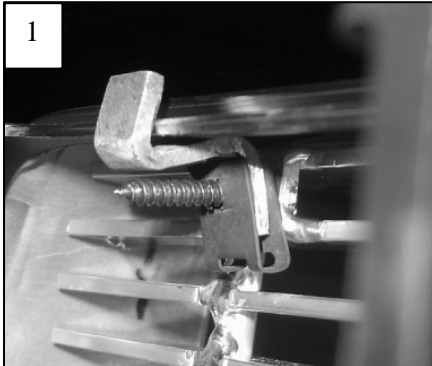

Step 2

Slide the u-nuts onto J hooks. Insert the screws into the tabs on the billet. Start to thread the shorter J hooks onto the top screws (1). Start to thread the longer J hooks onto the lower screws (2). Center the grille in place. Wrap the hooks around plastic bars in the openings. Use a Phillips screwdriver to tighten the hardware. Re-install the grille onto the vehicle.

Thank you for purchasing a T-Rex Billet Grille. 7/24/08

