

# **T-REX**

## **Billet Grilles**

55781

04-08 NISSAN

TITAN

55781

04-08 NISSAN

TITAN

### 04-08 NISSAN TITAN

#### UPPER CLASS SERIES FOG LIGHT GRILLES

#### Tools Required:

Small Slotted Screwdriver  
5/16 Socket  
Drill & 3/16" Drill Bit

#### Part List:


2 Upper Class Bumper Grilles  
2 6-32 Nylon Lock Nuts  
2 #10 Flat Washers

#### Read and understand instructions before attempting installation

Note: These grilles install into blocked off fog light holes.  
Grilles will not work with factory fog lights in air dam.

#### Step 1

Remove the plastic inserts from the openings. Depress the two clips on top of the inserts; pull up and pivot forward to unfasten the lower clip. Remove both from the bumper cover.

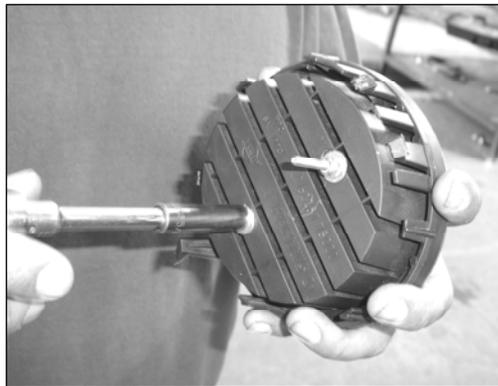

#### Step 2

Use the studs on the new grilles as a reference to drill two holes in the plastic inserts. Drill a 3/16" hole aligned with each stud. Center the grilles in place. Use the nuts and washers to secure the grilles. Re-install the inserts back onto the vehicle. *Thank you for purchasing a T-Rex Billet Grille. 10/24/06*