



6717801
04-07 NISSAN
TITAN/ARMADA

6717801
04-07 NISSAN
TITAN/ARMADA

04-07 NISSAN TITAN/ARMADA
X-METAL SERIES MESH GRILLE

Tools Required:


Small Slotted Screwdriver
5/16 Wrench
Pliers

Part List:

- 1 Upper Class Grille - Center
- 2 Upper Class Grille - Sides (Right & Left)
- 10 6-32 Nylon Lock Nuts
- 10 #10 Flat Washers
- 10 1.5" J Hooks

Read and understand instructions before attempting installation

Step 1

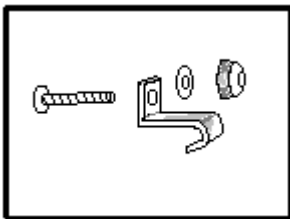

Remove the factory grille from the truck. Use a small slotted screwdriver to unclip the plastic clips. There are two on each end, four along the top and three along the bottom. Now remove the grille. The side openings have plastic air shrouds held in place by molded clips. Remove the air shrouds. Thread a 'J' hook assembly onto each stud (see diagram). Test fit the grilles in place.

Step 2

The center grille mesh may be cut from the grille openings but is not necessary. If desired, test fit the grilles into the openings. Note where the J hooks need to fasten to the factory grille; it is important to leave this area or the grilles will not be able to mount to the grille. The grilles will rest on this uncut portion of the plastic. Apply masking tape the face of the grille to prevent scratching. Use a die grinder or jigsaw to cut the inner grille mesh.

Step 2

Center the grilles into the openings. Use a 5/16" wrench to tighten the 'J' hooks. Make sure the hooks wrap around the grille mesh. Re-install the logo with double-sided tape if desired. Re-install the air shrouds and grill assembly back onto the vehicle.

Thank you for purchasing a T-Rex Billet Grille. 10/17/06