

672901X
2014 Polaris
RZR XP1000



672901X
2014 Polaris
RZR XP1000

2014 Polaris RZR XP1000 **X-Metal Lower Mesh Grille**

TOOLS REQUIRED:

Phillips Head Screwdriver
6-32 Nut Driver Or Socket

PARTS LIST

(1) X-Metal Lower Grille
(2) 125° Flange Brackets
(2) 6-32 Nylock Nuts



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.


Step 1

Begin by removing factory grille assembly from vehicle. Refer to vehicles owner manual for proper front grille disassembly. Carefully place the grille face up on a soft surface. Remove the lower grille by unscrewing the two factory Phillips head screws located along the top of the lower grille. (Fig 1)



Step 2

Position the X-Metal Grille into the center of the factory grille shell. While supporting the X-Metal Grille assembly, flip the entire assembly face down exposing the back of the grille. Install the two 135° flange brackets and nylock nuts in the two exposed studs located on opposite sides of the grille securing the flange brackets to the factory grille opening. (Fig 2)

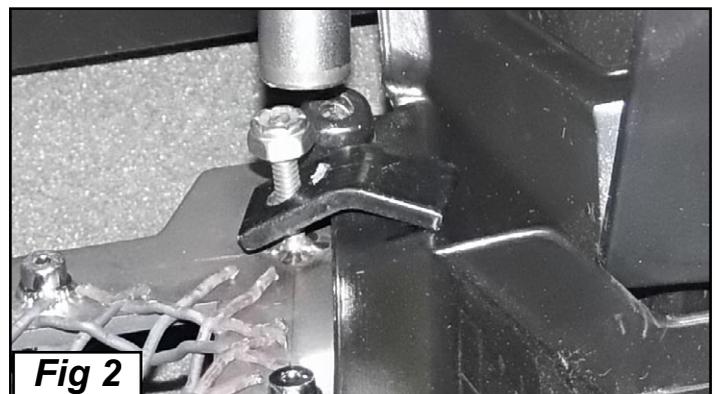

672901X
2014 Polaris
RZR XP1000



672901X
2014 Polaris
RZR XP1000

2014 Polaris RZR XP1000
X-Metal Lower Mesh Grille

Step 3

Secure the tabs to the grille with the included 6-32 Nylock nuts. The 135 Degree tabs will secure the X-Metal grille to the assembly as shown. Reinstall factory grille assembly in reverse order of assembly. Your installation is now completed. (Fig 3)

