

**21458**  
**21458B**

**2013 DODGE**  
**RAM 1500**



**21458**  
**21458B**

**2013 DODGE**  
**RAM 1500**

## 2013 DODGE RAM 1500

### Billet Grille

Install time: 30 Mins.

#### TOOLS REQUIRED:

Screwdriver  
Flat Screwdriver

#### PARTS LIST:

(4) Billet Grilles  
(8) Centerhole Flange Brackets  
(8) U-Nuts  
(8) #8 1.5" 6head Screws

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS  
BEFORE ATTEMPTING INSTALLATION.

- Remove Clips to Remove the Plastic Cover. (Fig. 1)
  - Remove the Grille Shell.
  - Remove the Plastic Grille Support. (Fig. 2)
  - Unclip the Plastic Grille Covers with a Flat Screwdriver. (Fig. 3)
  - Place the Billet Grilles onto the Factory Grille and Place the #8 Screws through the Brackets on the Billet Grille. (Fig. 4)
  - From behind the Grille, Place the U-Nuts onto the Flange Brackets and then Thread them onto the #8 Screws. (Fig. 5)
  - Place back the Plastic Grille Covers (use the Flat Screwdriver to put back the covers).
- Place back the Grille Shell.



Fig 1

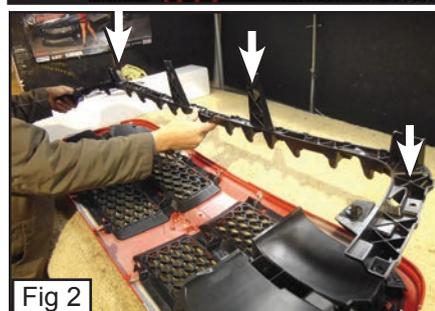


Fig 2



Fig. 3



Fig 4



Fig 5

### INSTALLATION COMPLETE