

**55458**  
**52458**  
**2013 DODGE**  
**RAM 1500**



**55458**  
**52458**  
**2013 DODGE**  
**RAM 1500**

---

## **2013 DODGE RAM 1500**

**Mesh Bumper**  
**Install time: 20 Mins.**

**TOOLS REQUIRED:**

3/16 Drillbit + Drill  
Screwdriver


**PARTS LIST:**

(1) Billet Grille  
(2) Fender Flatwashers  
(2) 6/32 Nylon Lock Nuts

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS  
BEFORE ATTEMPTING INSTALLATION.**

Remove either the Splash Guard or the Plastic Cover along the Top of the Grille to reach behind the Bumper Opening.

- Place the Grille onto the Bumper Opening and Look at where the Threaded Studs on the Grille is.
  - With the 3/16 Drillbit, Drill where the Threaded Studs on the Mesh Grille were. (Fig. 1)
  - Place a Fender Flatwasher and 6/32 Nylon Lock Nut on the Threaded Stud Behind the Bumper Opening.
- Repeat for remaining Threaded Stud.

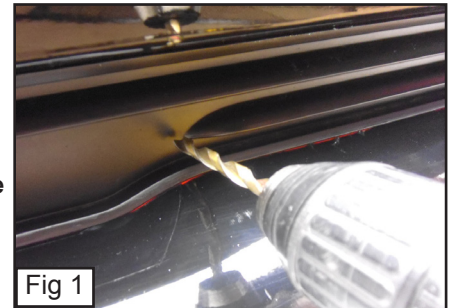

**INSTALLATION COMPLETE**