

671932X 07-08 TOYOTA FJ CRUISER

671932X 07-08 TOYOTA FJ CRUISER

2007-08 TOYOTA FJ CRUISER X-METAL SERIES MESH GRILLE

Tools Required:


Phillips / Slotted Screwdrivers 10mm Socket 5/16" Socket Die Grinder Epoxy (to re-install factory logo) Drill & 1/8" Drill Bit

Part List:

- 1 Grille
- 1 'A' Bracket
- 10 6-32 Nylon Lock Nuts
- 10 #10 Flat Washers


- 1 'T' Bracket
- 5 1/2" x 1/2" L Brackets
- 1 2" Flange Brackets

Read and understand instructions before attempting installation

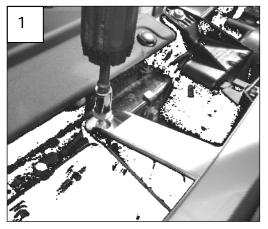

<u>Step 1.</u>

Unbolt the two 10 mm bolts on top of the grille (1). Unfasten the three plastic clips securing the grille to the core support; remove the grille. The factory Toyota logo must be removed from the factory mesh. The logo has small pins that go through the grille to the back; these pins are melted to secure the logo. Use a die grinder (or similar tool) to remove the melted plastic. Then the logo can be removed from the front.

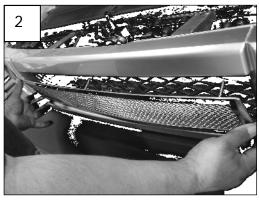

<u>Step 2.</u>

Center the grille in place (2). Use the 2" flange bracket to secure the center stud on the bottom. Use the small ½ L brackets and remaining nuts and washers to secure the grille.

Step 3.

The factory logo may be re-installed onto grille. If logo is not going to be used; skip to Step 4. The grille is supplied with a pair of stainless steel letters with mounting studs. These letters (T and A) fit into the back of the factory logo. Use a small amount of epoxy to secure the letters in place; allow to dry (cure) in place. Center the logo onto the grille. Drill a pair of 1/8" holes for the studs to reach the back of the grille assembly. Use two washers and nuts to secure the logo.

Step 4.

If a bumper insert is going to be installed; install at this time. Now re-install the grille assembly back onto the vehicle. **Thank you for purchasing a T-Rex Billet Grille. 10/5/06**



PAGE 2 OF 2