

**25938**  
**25938B**  
**2012 TOYOTA**  
**TACOMA**



**25938**  
**25938B**  
**2012 TOYOTA**  
**TACOMA**

## 2012 TOYOTA TACOMA

### Upper Class Billet Grille

Install time: 20 Mins.

#### TOOLS REQUIRED:

Socket Wrench

#### PARTS LIST:

(1) Bumper Billet Grille (2) 2 1/2" Screws  
(4) 1/2 x 1/2 L-Brackets  
(2) U-Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS  
BEFORE ATTEMPTING INSTALLATION.

#### IF YOUR HANDS REACH FROM BEHIND THE BUMPER SKIP TO FIG. 2

- Remove 2 Bolts and 1 Clip along the top of the Factory Grille. (Fig.1)
- Unclip 8 Clips along the Bottom of the Factory Grille to Remove.
- Place a U-Nut onto the L-Bracket with the Hole. (Fig. 2)
- Place Bumper Grille onto the Factory Bumper Opening. (Fig. 3)
- Insert the 2 1/2" Screw through the Bracket on the Billet Grille. (Fig. 4)
- From behind the Grille, Thread the L-Bracket onto the Screw so it Latches onto the Factory Grille. (Fig. 5)

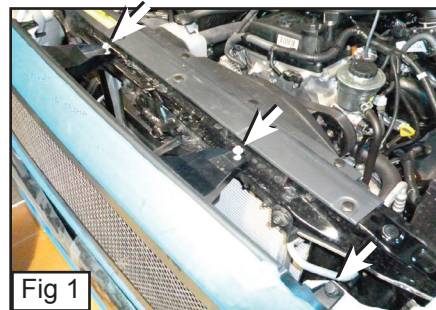
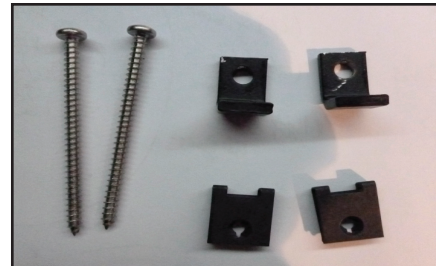


Fig 1

### Installation Complete



Fig. 3



Fig 4

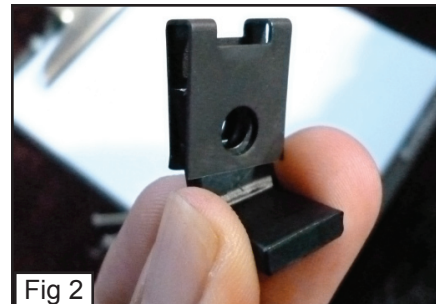


Fig 2

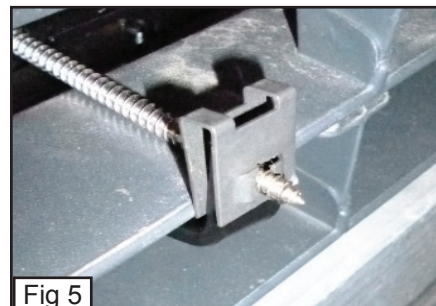


Fig 5