

52964/55964
2014 TOYOTA
TUNDRA



52964/55964
2014 TOYOTA
TUNDRA

2014 TOYOTA TUNDRA **Upper Class Bumper**

TOOLS REQUIRED:

Socket Set

PARTS LIST:

- (2) Bone Brackets
- (4) 6/32" Nylon Lock Nuts
- (1) Upper Class Bumper Mesh Grille



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer various models of each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Mesh Grille Installation

Step 1

Place the mesh grille into the factory bumper opening (Fig 1). Push the mesh grille inward until it is seated flush in the factory bumper opening.



Step 2

From underneath the front of the vehicle, reach up behind the factory bumper opening and locate the four threaded studs on the back of the mesh grille, place the two bone brackets onto the threaded studs as indicated on (Fig 2). One bone bracket will be installed on each side of the mesh grille.



52964/55964
2014 TOYOTA
TUNDRA



52964/55964
2014 TOYOTA
TUNDRA

Step 3

With the bone brackets placed on the threaded studs take the four nylon lock nuts and install them onto the four threaded studs, tighten with a socket and ratchet (Fig 3).

Installation complete.

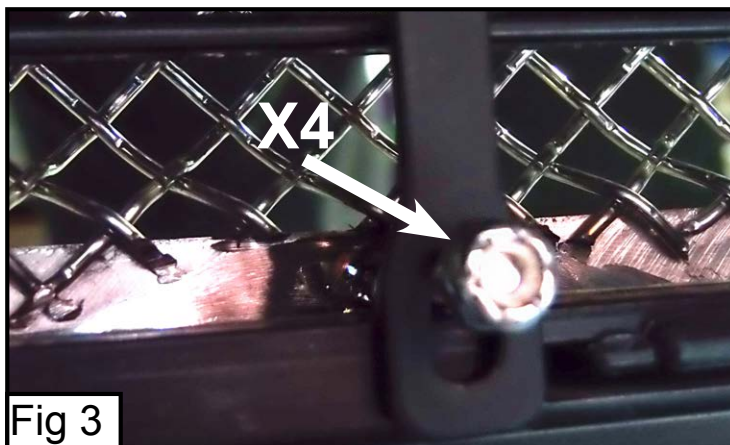


Fig 3