

T-REX TRUCK PRODUCTS INC.

25742

(16742P)

02-04 NISSAN

ALTIMA

BUMPER INSERT

25742

(16742P)

02-04 NISSAN

ALTIMA

BUMPER INSERT

Tools Required:

Phillip Screw Driver
5/16" Wrench or Pliers


Hardware / Parts Included:

1 - Billet Insert (9 Bars)
2 - 6-32 x 1.5 Machine Screws
2 - 6-32 Nylock Nuts
2 - #6 Flat Washers
2 - 1" "J" Hooks

Read and understand instructions before attempting installation

Step 1

Place a machine screw in each mount on the billet insert. Install a "J" hook from the back with a Nylock nut and washer. Place the billet insert in the bumper opening.

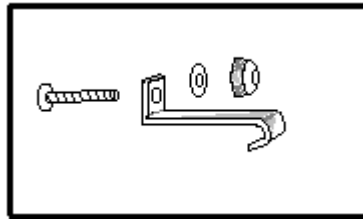

Step 2

Tighten the nuts down with the "J" hooks catching the rear edge of the bumper cover. Do not over tighten.

Step 3

The installation is now complete. *Thank you for purchasing a T-Rex Billet Grille.*