

# 21926

07-08 TOYOTA

# YARIS



# 21926

07-08 TOYOTA

# YARIS

## 07-08 TOYOTA YARIS



### Tools Required:

Phillips / Slotted Screwdrivers  
8mm, 10mm Socket

### Hardware / Parts Included:


1 Billet Insert	4 U Nuts
4 2" Flange Brackets	4 1 ¼" #8 6 Head Screws

## Read and understand instructions before attempting installation

### Step 1

Remove the 10mm bolts securing the lower motor skid plate to access the rear of the grille.

1

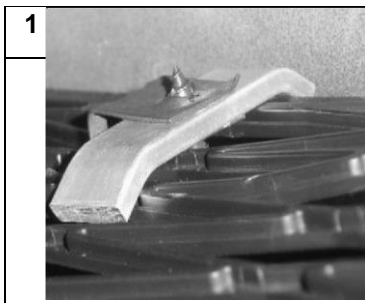

### Step 2

Place the provided U Nuts onto the flange brackets. Place the upper grille in place in the factory grill opening. Place the #8 6 head screws through the billet bars and through the four welded brackets with holes in them that are on the backside of the billet grille. While holding the grille in place, place the four flange brackets with the u nuts on the backside of the factory grille and tighten the screws. (Fig 1)

**If you purchased the lower grille; install now!**

### Step 3

Re-install the lower skid plate assembly onto the vehicle using the factory Hardware. **Thank you for purchasing your T-Rex billet grille. 10/18/13**