




ZROADZ
DYNAMIC LED MOUNTING SOLUTIONS

Z412281-KIT INSTALLATION INSTRUCTIONS

1. Remove the hood latch and engine cover.



2. Remove the fender flares and pull the front fascia away from the fender on both sides of the vehicle.

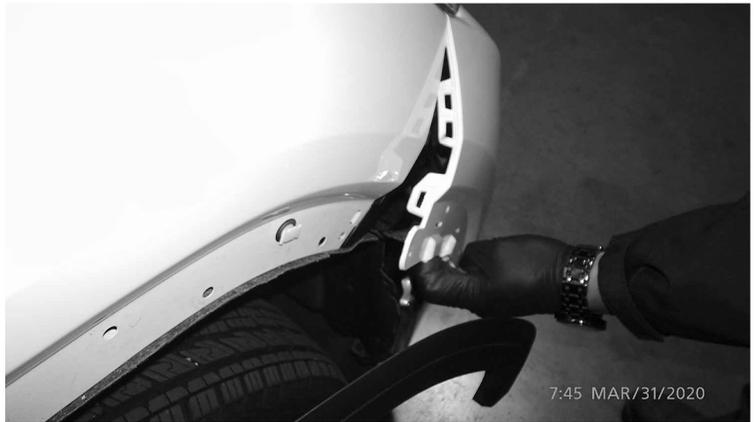

3. Remove the bolts retaining the grille to the core support under the headlight.



4. Remove the grille from the vehicle and set on a protected work surface.






ZROADZ
DYNAMIC LED MOUNTING SOLUTIONS

Z412281-KIT INSTALLATION INSTRUCTIONS

4. The lights can only be installed in the location as shown. Interference with the active grille shutters will occur if installed in any other location.



5. From the back side of the OEM grille, install the light brackets and backing plate as shown through the slots in the OEM grille. Use (2) #10-32 flange nuts.

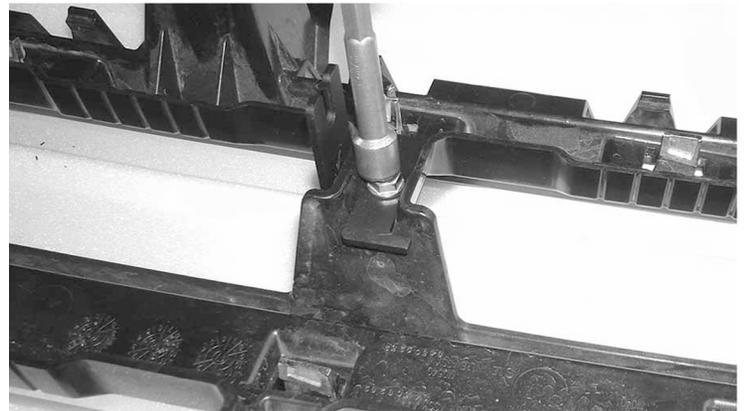


6. Install the LED light to the brackets. Use (1) spacer on each side of the light between the light and the bracket.



7. Route the wires using the supplied wire clamps and zip ties. Drill (2) 1/8" Holes as shown. Use the supplied wire clamp, push rivet and zip ties to route the wire to the side of the grille. **DO NOT DRILL THROUGH THE FRONT OF THE GRILLE!!**


Connect the wire harness to the LED lights, install the grille back to the vehicle and route the wire harness to the battery and switch.

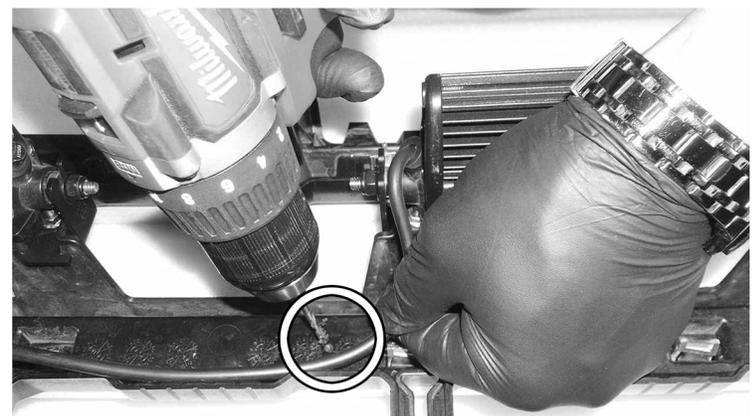

Z412281, Z412281-KIT
INSTALLATION INSTRUCTIONS

NUMBER	PART	QTY.
1	LED MOUNTING BRACKET	4
2	GRILL BRACKET	4
3	1/4" BLACK WASHER	4
4	AL SPACER	4
5	1/4" NYLON LOCK NUT	4
6	10-32 HEX NUT	4

TOP VIEW

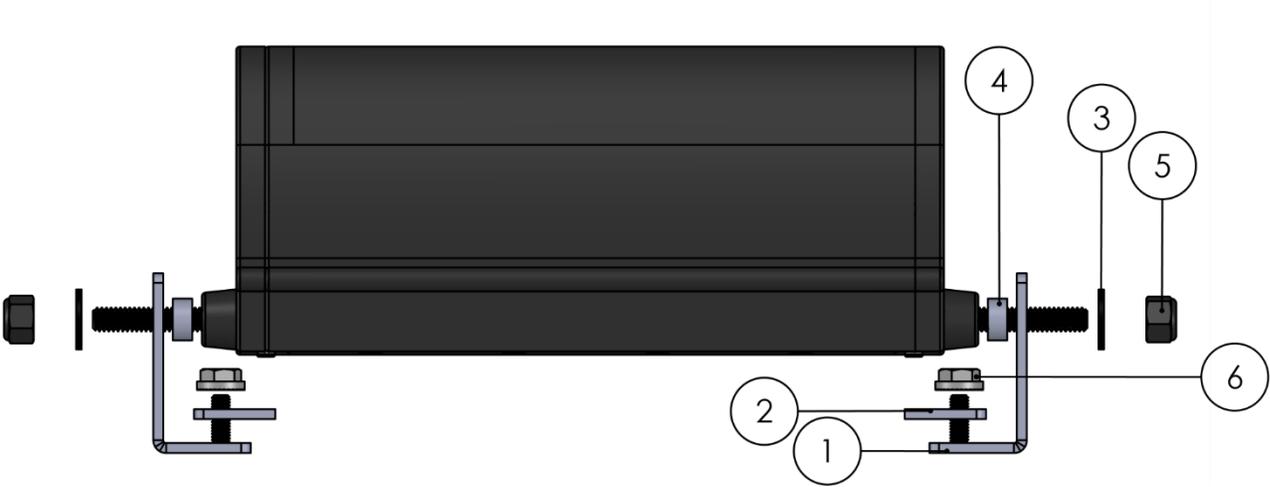

FRONT VIEW

